

2025 OWNER HANDBOOK



CHARGER

This Owner Handbook illustrates and describes the operation of features and equipment that are either standard or optional on this vehicle. This handbook may also include a description of features and equipment that are no longer available or were not ordered on this vehicle. Please disregard any features and equipment described in this handbook that are not on this vehicle. FCA US LLC reserves the right to make changes in design and specifications, and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

With respect to any vehicles sold in Canada, the name FCA US LLC shall be deemed to be deleted and the name FCA Canada Inc. used in substitution therefore.

This Owner Handbook is intended to familiarize you with the important features of your vehicle. Your most up-to-date Owner Handbook, Owner's Manual, Radio Instruction Manual and Warranty Booklet can be found by visiting the website on the back cover.

ROADSIDE ASSISTANCE

24 HOURS, 7 DAYS A WEEK AT YOUR SERVICE.

CALL 1-800-521-2779 OR VISIT CHRYSLER.RSAHELP.COM (USA)

CALL 1-800-363-4869 OR VISIT FCA.ROADSIDEAID.COM (CANADA)

SERVICES: Flat Tire Service, Out of Charge, 12 Volt Battery Jump Assistance, Lockout Service and Towing Service.

Please see the Customer Assistance chapter in this Owner Handbook for further information.

FCA US LLC reserves the right to modify the terms or discontinue the Roadside Assistance Program at any time. The Roadside Assistance Program is subject to restrictions and conditions of use, that are determined solely by FCA US LLC.



WARNING: Operating, servicing and maintaining a passenger vehicle or off-highway motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to **www.P65Warnings.ca.gov/passenger-vehicle**.



Vehicle images are for illustration purposes only. Actual products sold may vary.



1

INTRODUCTION
Page 4



2

INTERIOR
Page 9




3

EXTERIOR
Page 34



4

EMERGENCY
Page 51

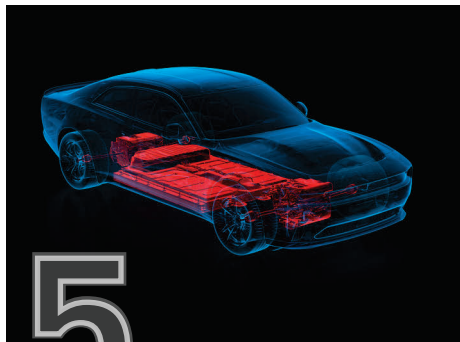

5

SPECIFICATIONS
Page 59



6

INDEX
Page 63

INTRODUCTION

OWNER HANDBOOK INTRODUCTION	4
SYMBOLS KEY	4
CUSTOMER ASSISTANCE	5
Roadside Assistance	5
FCA US LLC Customer Center	5
FCA Canada Customer Care	5
Mexico	5
Puerto Rico And US Virgin Islands	5
Customer Assistance For The Hearing Or Speech Impaired (TDD/TTY)	5
Service Contract	6
Warranty Information	6
Ordering and Accessing Additional Owner's Information	6
Change Of Ownership Or Address	7
General Information	7

INTERIOR

INTERIOR OVERVIEW	9
STARTING AND OPERATING	10
Keyless Enter 'n Go™ Propulsion System (EV Models)	10
Keyless Enter 'n Go™ — Passive Entry	11
DOORS	11
Interior Door Opening	11
MULTIMEDIA	12
Uconnect System	12
Uconnect Settings	12

Pair/Delete A Device	13
Apple CarPlay®	13
Android Auto™	14
Uconnect Voice Recognition	14
Performance Pages — If Equipped	14
Drive Modes	15
CHARGING & OUTLETS	15
Power Outlets	15
USB/AUX Control	16
Wireless Charging Pad — If Equipped	16
GETTING TO KNOW YOUR INSTRUMENT PANEL	18
Uplevel Instrument Cluster	18
Location And Controls	19
Warning Lights And Messages	21
INTERIOR COMFORT SETTINGS	21
Climate Controls	21
Automatic Climate Control Descriptions And Functions	21
Automatic Temperature Control (ATC)	22
Climate Voice Commands	23
Front Heated Seats	23
Front Ventilated Seats — If Equipped	23
Power Adjustment (Front Seats) — If Equipped	23
Rear Seat Easy Entry (2-Door Models) — If Equipped	23
Driver Memory Settings — If Equipped	24
Head Restraints	25
EXTERIOR LIGHTS	26
Headlight Switch	26

Automatic High Beam — If Equipped	27
Automatic Headlights	27
Automatic Headlights On With Wipers — If Equipped	27
WINDSHIELD WIPERS AND WASHERS	27
Windshield Wiper Operation	27
Rain Sensing Wipers — If Equipped	28
CRUISE CONTROL SYSTEMS	28
Adaptive Cruise Control (ACC)	28
UNIVERSAL GARAGE DOOR OPENER (HOMELINK®)	30
Troubleshooting Tips	30
PARKING ASSISTANCE	31
Parksense Front/Rear Park Assist System	31
ELECTRIC PARK BRAKE (EPB)	31

EXTERIOR

EXTERIOR OVERVIEW	34
EXTERIOR CAMERA VIEWS	35
Surround View Camera System	35
MANUAL DOOR LATCHING/UNLATCHING	35
HOOD	37
Opening The Hood	37
Closing The Hood	37
HATCH	38
Opening The Hatch	38
Closing The Hatch	38
Cargo Area Features	39
HIGH VOLTAGE BATTERY	40

Battery Conditioning	42
HIGH VOLTAGE CHARGING OPERATION	42
SAE J1772 Charging Inlet	42
Smart Charge Button	42
AC Level 1 Charging (120 Volt, 12 Amp)	
— If Equipped	43
AC Level 2 Charging (240 Volt)	47
DC Charging	47
Emergency Release Cable – If Equipped ...	47
Vehicle Charge Indicators	48
Electric Vehicle App	48

EMERGENCY

ASSIST AND SOS — IF EQUIPPED	51
TIRE SERVICE KIT — IF EQUIPPED	53
JUMP STARTING	54
Preparations For Jump Start	55
Jump Starting Procedure	56
FREEING A STUCK VEHICLE	57
TOWING A DISABLED VEHICLE	57
Without The Key Fob	58

SPECIFICATIONS

UNDERHOOD COMPARTMENT — EV	
MODELS	59
ELECTRIC DRIVE MODULE (EDM)	
BREAK-IN RECOMMENDATIONS	60
FLUID CAPACITIES	60

FLUIDS AND LUBRICANTS	60
SERVICING AND MAINTENANCE	61
Maintenance Plan — EV Models	61
TRAILER TOWING	62

OWNER HANDBOOK INTRODUCTION

Thank you for choosing Dodge. This Owner Handbook has been prepared to help you quickly become acquainted with important features of your vehicle. It contains most things you will need to operate and maintain your vehicle, including emergency information.

FCA US LLC is committed to protecting the environment and invites you to refer to the complete Owner's Manual on www.mopar.com/en-us/html (US) or www.owners.mopar.ca/en (Canada).

This handbook also illustrates and describes the operation of certain features and equipment that come either standard or optional on your vehicle. It may include a description of features and equipment that your vehicle is not equipped with. FCA US LLC reserves the right to make changes in design and specifications and/or make additions to or improvements to its products without imposing any obligation upon itself to install them on products previously manufactured.

Scan this QR code to access the complete Owner's Manual.



Mobile App:



Download the Dodge Mobile App from the Google Play® Store or Apple® App Store® for access to Remote Commands. Log in with your account information.



TECH
AUTHORITY

To order a hard copy of your Owner's Manual, visit:
www.techauthority.com

SYMBOLS KEY

WARNING!	These statements apply to operating procedures that could result in a collision, bodily injury and/or death.
CAUTION!	These statements apply to procedures that could result in damage to your vehicle.
NOTE:	A suggestion which will improve installation, operation, and reliability. If not followed, may result in damage.
TIP:	General ideas/solutions/suggestions on easier use of the product or functionality.
 PAGE REFERENCE ARROW	Follow this reference for additional information on a particular feature.
 FOOTNOTE	Supplementary and relevant information pertaining to the topic.

If you do not read the entire Owner's Manual, you may miss important information. Observe all Cautions and Warnings.

CUSTOMER ASSISTANCE

FCA US LLC and its authorized dealers are genuinely interested in your satisfaction. We want you to be happy with our products and services.

Warranty service must be done by an authorized dealer. We strongly recommend that you take the vehicle to an authorized dealer for non-warranty service as well. FCA US LLC's authorized dealers have the facilities, factory-trained technicians, special tools, and the latest information to ensure the vehicle is fixed correctly and in a timely manner.

If your authorized dealer is unable to resolve the concern, you may contact an FCA US LLC Customer Assistance center.

Any communication to an FCA US LLC Customer Assistance center should include the following information:

- Owner's name and address
- Owner's telephone number (home, mobile, and office)
- Authorized dealer name
- Vehicle Identification Number (VIN)
- Vehicle delivery date and mileage

ROADSIDE ASSISTANCE

Call 1-800-521-2779 or visit [chrysler.rsahelp.com\(USA\)](http://chrysler.rsahelp.com(USA))

Call 1-800-363-4869 or visit [fca.roadsideaid.com\(Canada\)](http://fca.roadsideaid.com(Canada))

Available: 24 Hours, 7 Days A Week

Your vehicle's VIN is required to receive covered services.

- Flat Tire Service
- Out of Gas/Fuel Delivery (Gas Engine Only) - This service is limited to two occurrences in a 12-month period. Up to two gallons of fuel will be provided by a service provider.
- Out of Charge (EV Only)
- 12V Battery Jump Assistance
- Lockout Service
- Towing Service

FCA US LLC CUSTOMER CENTER

P.O. Box 21-8004

Auburn Hills, MI 48321-8004

Phone: (800) 423-6343

FCA CANADA CUSTOMER CARE

P.O. Box 1621

Windsor, Ontario N9A 4H6

Phone: (800) 465-2001 English / (800) 387-9983 French

MEXICO

Customer Relations Office

Av. Prolongacion Paseo de la Reforma, 1240
Santa Fe Cuajimalpa, Cuajimalpa de Morelos

Ciudad de México, C.P. 05348

In Mexico City: 800-505-1300

Outside Mexico City: +(52) 55 50817568

PUERTO RICO AND US VIRGIN ISLANDS

FCA Caribbean LLC

P.O. Box 191857

San Juan 00919-1857

Phone: (800) 423-6343

CUSTOMER ASSISTANCE FOR THE HEARING OR SPEECH IMPAIRED (TDD/TTY)

To assist customers who have hearing difficulties, FCA US LLC has installed special Telecommunication Devices for the Deaf (TDD)

equipment at its customer centers. Any hearing or speech impaired customer, who has access to a TDD or a conventional teletypewriter (TTY) in the United States, can communicate with FCA US LLC by dialing 1-800-380-2479.

Canadian residents with hearing difficulties who require assistance can use the special needs relay service offered by Bell Canada. For TTY users, dial 711. For Voice callers, dial 1-800-855-0511 to connect with a Bell Relay Service operator.

SERVICE CONTRACT

You may have purchased a service contract for a vehicle to help protect you from the high cost of unexpected repairs after FCA US LLC's New Vehicle Limited Warranty expires. The FlexCare Vehicle Protection plans are the **ONLY** vehicle extended protection plans authorized, endorsed and backed by FCA US LLC to provide additional protection beyond your vehicle's warranty. If you purchased a FlexCare Vehicle Protection Plan, you will receive Plan Provisions and an Owner Identification Card in the mail within three weeks of the vehicle delivery date. If you have any questions about the service contract, call the FlexCare National Customer Hotline at 1-800-521-9922.

For Canadian residents, you may have purchased additional coverage with an extended service contract. FCA Canada Inc. stands fully behind

its service contracts. Be sure that the one you buy is a genuine Canada Inc. service contract. We are not responsible for other companies' contracts. If you purchased a contract other than a genuine FCA Canada Inc. service contract and you have a problem, you will have to contact the administrator of that contract for resolution. If you have any questions about the service contract, call the FlexCare National Customer Hotline at (800) 465-2001 English / (800) 387-9983 French).

FlexCare Vehicle Protection Plans offer valuable protection against repair costs after your vehicle warranties have expired. FlexCare Vehicle Protection plans are the **ONLY** vehicle extended protection plans authorized, endorsed and backed by FCA US LLC to provide additional protection beyond your vehicle's warranty.

FCA US LLC is not responsible for any service contract you may have purchased from another manufacturer. If you require service after the FCA US LLC New Vehicle Limited Warranty expires, please refer to the contract documents, and contact the person listed in those documents.

We appreciate that you have made a major investment when you purchased the vehicle. An authorized dealer has also made a major investment in facilities, tools, and training to assure that you are absolutely delighted with the ownership experience.

WARRANTY INFORMATION

To access your warranty information online, visit www.mopar.com/om (US) or www.owners.mopar.ca/en or www.owners.mopar.ca/fr (Canada).



EV warranty service must be done by a certified EV Chrysler, Dodge, Jeep®, Ram, or Business Link dealer. To find a certified dealer, visit the Find-A-Dealer feature on the Mopar® website and select "Show certified EV dealers only".

ORDERING AND ACCESSING ADDITIONAL OWNER'S INFORMATION

To order the following manuals, you may use either the website or the phone numbers listed below.

Service Manuals

These comprehensive Service Manuals provide a complete working knowledge of the vehicle, system, and/or components and is written in straightforward language with illustrations, diagrams, and charts.

Diagnostic Procedure Manuals

Diagnostic Procedure Manuals are filled with diagrams, charts and detailed illustrations.

These manuals make it easy to find and fix problems on computer-controlled vehicle systems and features. They show exactly how to find and correct problems, using step-by-step troubleshooting and drivability procedures, proven diagnostic tests and a complete list of all tools and equipment.

To order a digital copy of your Service or Diagnostic Procedure manuals, visit:

www.techauthority.com (US and Canada).

Owner's Manuals

To access your Owner's Information online, visit www.mopar.com/om (US) or www.owners.mopar.ca (Canada).

Or visit:

www.techauthority.com to order physical copies of Owner's Manuals (US).

Owner's Manuals, Radio Manuals and Warranty Information Books can be ordered through Archway at:

1-800-387-1143 (Canada)

CHANGE OF OWNERSHIP OR ADDRESS

*If you have purchased this vehicle used or have changed your address, please provide the following information and mail to:

FCA US LLC

P.O. Box 21-8008

Auburn Hills, MI 48321-8004

Make sure to include the following:

- Date of Sale (mm/dd/yy)
- Vehicle Identification Number (17 Character ID located on top left of the instrument panel)
- Exact Odometer Reading
- First and Last Name
- Phone Number
- Street Address, City, State and Zip Code
- Email Address

*Applies to US residents only.

GENERAL INFORMATION

The following regulatory statement applies to all Radio Frequency (RF) devices equipped in this vehicle:

This device complies with Part 15 of the FCC Rules and with Innovation, Science and Economic Development Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Innovation, Science and Economic Development applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage, et
2. L'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

La operación de este equipo está sujeta a las siguientes dos condiciones:

1. Es posible que este equipo o dispositivo no cause interferencia perjudicial y
2. Este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

INTERIOR OVERVIEW



- 1 — Garage Door Opener (HomeLink®) ➞ page 30
- 2 — Assist & SOS Buttons ➞ page 51
- 3 — Windshield Wipers and Washers ➞ page 27
- 4 — Instrument Cluster Display ➞ page 18
- 5 — Cruise Control Buttons ➞ page 28

- 6 — Uconnect Radio Screen Display ➞ page 12
- 7 — Instrument Cluster Controls ➞ page 18
- 8 — Uconnect Voice Command Buttons ➞ page 14
- 9 — Headlight Switch ➞ page 26
- 10 — Drive Mode Button ➞ page 12

- 11 — PowerShot Button (EV Models)
- 12 — Gear Selector
- 13 — USB/AUX Media Hub ➞ page 16
- 14 — Start Button ➞ page 10
- 15 — Wireless Charging Pad ➞ page 16

STARTING AND OPERATING

KEYLESS ENTER 'N GO™ PROPULSION SYSTEM (EV MODELS)

This feature allows the driver to start the vehicle with the push of a button as long as the key fob is in the passenger compartment.

Press the Start button to place the vehicle in the ON/RUN position. Press and hold the brake pedal while pushing the Start button for Ready to Drive mode.



Start Button

The Start button can be placed in the following modes:

OFF

- The vehicle is stopped.
- Some electrical devices (e.g. power locks, alarm, etc.) are still available.

ON/RUN

- Vehicle is ON.
- All electrical devices are available (e.g. power windows, climate controls, heated seats, etc.).

READY TO DRIVE

- The vehicle will start (when foot is on the brake pedal).

NOTE:

If the Start button does not change the mode by pushing the Start button, the key fob may have a low or depleted battery. In this situation, a backup method can be used to operate the Start button. Put the nose side (side opposite of the emergency key) of the key fob against the Start button and push to operate the button.

WARNING!

- When exiting the vehicle, always remove the key fob from the vehicle and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle.
- Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Keyless Enter 'n Go™ Propulsion System in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.
- Do not leave children or animals inside parked vehicles in hot weather. Interior heat buildup may cause serious injury or death.

CAUTION!

An unlocked vehicle is an invitation for thieves. Always remove key fob from the vehicle and lock all doors when leaving the vehicle unattended.


KEYLESS ENTER 'N GO™ — PASSIVE ENTRY

Keyless Enter 'n Go™ – Passive Entry allows you to lock and unlock the vehicle's door(s) without having to push the key fob lock or unlock buttons.

To Unlock/Lock The Vehicle's Doors And Hatch

With a valid Passive Entry key fob with you, grab the handle to unlock the vehicle. The driver's handle will unlock the driver's door only (unless otherwise programmed in Uconnect Settings), whereas the passenger handle (or a rear handle when equipped with four-door Passive Entry) will unlock all doors and the hatch automatically.

With a valid Passive Entry key fob on you, touch the Passive Entry lock icon on the door handle to lock all four doors and hatch.

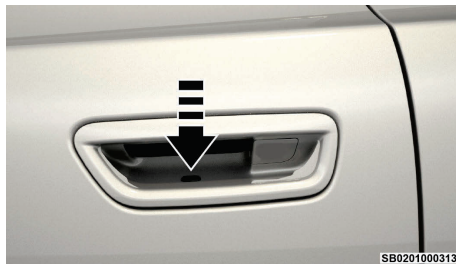

Push The Door Handle Button To Lock

NOTE:

- DO NOT grab the door handle when pushing the lock button. This could unlock the door(s).
- Be sure to keep the vehicle key fob with you.

DOORS

INTERIOR DOOR OPENING

The door can be opened by pressing the button located on the door panel. If all doors are locked, pressing the button will unlock the other doors and hatch.



Power Door Button Opening

Manual Door Opening

If the electronic door button does not work, for example if the 12V battery of the car is low, the doors can still be opened from the inside by pulling the manual door handle located on each front door.

NOTE:

If the door does not close, you must manual latch it using the key cylinder on the driver side door handle, see ➞ page 35 for instructions.




Manual Door Handle

MULTIMEDIA

Uconnect SYSTEM

Scan this QR code to learn more about the Uconnect System.

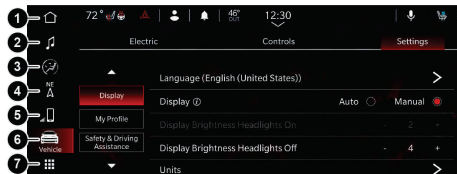

Uconnect 5/5 NAV With 12.3-inch Display

- 1 — Home Button
- 2 — Radio/Media Button
- 3 — Comfort Button
- 4 — Navigation Button
- 5 — Phone Button
- 6 — Vehicle Button
- 7 — Apps Button

NOTE:

Uconnect screen images may not reflect the exact software in the vehicle.

Uconnect SETTINGS



Uconnect 5/5 NAV With 12.3-inch Display Uconnect Settings

Scan this QR code to learn more about Uconnect Settings.



Press the Vehicle button, then press the Settings button toward the top of the touchscreen to get started with customizing settings.

NOTE:

Depending on the vehicle's options, feature settings may vary.

- **My Profile** — Customize features such as "Voice Options" or "Notification Pop-ups".


- **Display** — Customize features such as display brightness or set navigation instructions to appear on the instrument cluster display.
- **Safety/Driving Assistance** — Customize features such as the warning signal and steering wheel strength.
- **Phone/Bluetooth®** — Customize settings related to the paired device.
- **Camera** — Customize the vehicle's camera settings.
- **Brakes** — Customize settings related to the vehicle's brakes.
- **Seats & Comfort** — Customize comfort levels with heated seats or heated steering wheel.
- **Key Off Options** — Customize what the vehicle does when it shuts down.
- **Audio** — Customize the vehicle's audio settings.
- **Notifications** — Customize alerts for notification sound chimes and new text message alerts.

PAIR/DELETE A DEVICE

Scan this QR code to learn more about pairing a device.



1. Make sure Bluetooth® is enabled on the mobile phone.
2. With the vehicle in the ACC or ON/RUN position, press the Phone button on the vehicle's touchscreen menu bar.
3. Press "Device Manager".
4. Select "Add Device".

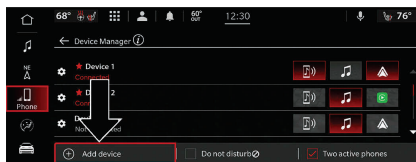

Unconnect 5/5 NAV With 12.3-inch Display Pairing A Phone

5. Follow the prompts on the phone and on the touchscreen.

Follow these steps to remove the smartphone:

1. Press the Device Manager button on the touchscreen.
2. Press the Settings gear icon next to the phone or device you wish to remove.
3. Press "Delete Device". The device should be removed.

APPLE CARPLAY®

Scan this QR code to learn more about Apple CarPlay®.



1. Ensure that the iPhone® is unlocked for the very first connection, then ensure Siri is enabled in settings.
2. Connect the iPhone® to one of the media USB ports in the vehicle, or pair the iPhone® with the system. You have no need to plug the device in if it is paired with the system.
3. Once the device is connected and recognized, the Phone icon on the menu bar changes to the Apple CarPlay® icon.

NOTE:

To use Apple CarPlay®, make sure that cellular data is turned on, and that you are in an area

with cellular coverage. Your data and cellular coverage is shown on the left side of the touchscreen within Apple CarPlay®. Data plan rates may apply.

ANDROID AUTO™

Scan this QR code to learn more about Android Auto™.



1. Connect the phone to one of the media USB ports in the vehicle, or pair the phone with the system. You have no need to plug the device in if it is paired with the system.
2. Once the device is connected and recognized, the Phone icon on the menu bar changes to the Android Auto™ icon.

NOTE:

To use Android Auto™, make sure you are in an area with cellular coverage. Android Auto™ may use cellular data, and your cellular coverage is shown in the upper right corner of the touchscreen. Data plan rates may apply.

UCONNECT VOICE RECOGNITION

Getting Started

Scan this QR code to learn more about Voice Recognition.



This vehicle is capable of voice commands, this feature is called Voice Recognition (VR). Start using Uconnect VR with these helpful quick tips. They provide the key voice commands and tips you need to know to control the vehicle's VR system.

Basic Voice Commands

The following basic Voice Commands can be given at any point while using the Uconnect system.

Push the VR button on the steering wheel. After the beep, say:

- **“Cancel”** to stop a current voice session.
- **“Help”** to hear a list of suggested Voice Commands.
- **“Repeat”** to listen to the system prompts again.


Notice the visual cues that inform you of your Voice Recognition system's status.

NOTE:

If this vehicle is not equipped with Voice Recognition, you may still have voice recognition buttons. These buttons will work with Android Auto™ and Apple CarPlay® by initiating a Siri or Google Assistant voice recognition session. Depending on your device, you may need to press and hold the VR button for one second to begin a voice recognition session.

PERFORMANCE PAGES — IF EQUIPPED

Performance Pages is an application that provides a display of performance indicators that will help you gain familiarity with the capabilities of the vehicle in real time.

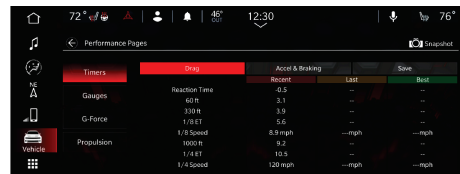

Uconnect 5/5 NAV With 12.3-inch Display Performance Pages

To access the Performance Pages:

1. Press the Vehicle button on the touchscreen.


2. Press “Performance Pages”.
3. Press the desired button on the touchscreen to access that specific option within the Performance Pages.

DRIVE MODES

Scan this QR code to learn more about Drive Modes.



Drive Modes lets you change how the vehicle will handle under certain conditions.

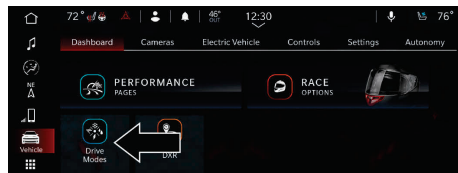

Uconnect 5/5 NAV With 12.3-inch Display Drive Modes

To access the Drive Mode Pages:

1. Press the Vehicle button on the touchscreen.
2. Press “Drive Modes”.

3. Press the desired button on the touchscreen to adjust the Drive Modes between Drag (if equipped), Sport, Track, Auto, Wet/Snow, and Custom.

CHARGING & OUTLETS


POWER OUTLETS

This vehicle may be equipped with 12 Volt (13 Amp) power outlets that can be used to power cellular phones, small electronics, and other low powered electrical accessories.

CAUTION!

Power outlets are designed for accessory plugs only. Do not insert any other object in the power outlets as this will damage the outlet and blow the fuse. Improper use of the power outlet can cause damage not covered by your New Vehicle Limited Warranty.

The power outlet is located inside the storage area in the center console.

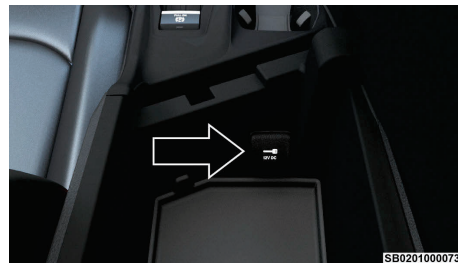

Power Outlet

NOTE:

- Do not connect any device that has a power rating higher than 180 W to the outlet. Do not use power adapters that do not fit the outlet as this may damage it.
- Power outlets labeled with a key symbol are powered when the vehicle is in the ON/RUN position.

WARNING!

To avoid serious injury or death:

- Only devices designed for use in this type of outlet should be inserted into any 12 Volt outlet.
- Do not touch with wet hands.

(Continued)

WARNING!

- Close the lid when not in use and while driving the vehicle.
- If this outlet is mishandled, it may cause an electric shock and failure.

CAUTION!

- Many accessories that can be plugged in draw power from the vehicle's battery even when not in use (i.e., cellular phones, etc.). Eventually, if plugged in long enough, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the vehicle from starting.
- Accessories that draw higher power (i.e., coolers, vacuum cleaners, lights, etc.) will degrade the battery even more quickly. Only use these intermittently and with greater caution.
- After the use of high power draw accessories or long periods of the vehicle not being started (with accessories still plugged in), the vehicle must be driven a sufficient length of time to allow the alternator to recharge the vehicle's battery.
- Power outlets are designed for accessory plugs only. Do not hang any type of

(Continued)

CAUTION!

accessory or accessory bracket from the plug. Improper use of the power outlet can cause damage.

USB/AUX CONTROL

This vehicle may be equipped with four USB ports:

- In the instrument panel under the Uconnect system.
- On the back of the center console.



Front USB Ports

Plugging in a mobile device to a USB port below the Uconnect screen may activate the Android Auto™ or Apple CarPlay® features.

To disable Android Auto™ or Apple CarPlay®, navigate to "Device Manager" in Phone Mode section of your Uconnect System.

A USB Type A may be present in the center console of the vehicle. This USB is for the Drive eXperience Recorder (DXR) memory feature and will not provide media or power support to a device.

WIRELESS CHARGING PAD — IF EQUIPPED



Wireless Charging Pad

Be sure to place your mobile device on the center of the charging pad, with the display facing upward, and your device not covering the LED.

LED Indicator Status:



No Light: Charging pad is idle or searching for a device, or device may not be compatible with the Qi® standard.



Blue Light: Device is detected and is charging.



Red Light/Flashing: Internal error, or foreign object is detected.



Green Light: Device has completed battery charging (if device is equipped to transmit this information).

NOTE:

- Do not place the key fob on or near the charging pad.
- Using a phone case may interfere with wireless charging.

CAUTION!

The key fob should not be placed on the charging pad or within 6 inches (15 cm) of it. Doing so can cause excessive heat buildup and damage to the fob. Placing the fob in close proximity of the charging pad blocks the

(Continued)

CAUTION!


fob from being detected by the vehicle and prevents the vehicle from starting.

To prevent malfunction or burns:

- Do not insert any metallic or magnetic materials (such as Coins, Keys, Metal Cards, Paper Clips) or Key Card between the charging pad and the phone while charging.
- Do not attach metallic or magnetic materials (such as aluminum sticker) to the device side charging area.

GETTING TO KNOW YOUR INSTRUMENT PANEL

UPLEVEL INSTRUMENT CLUSTER

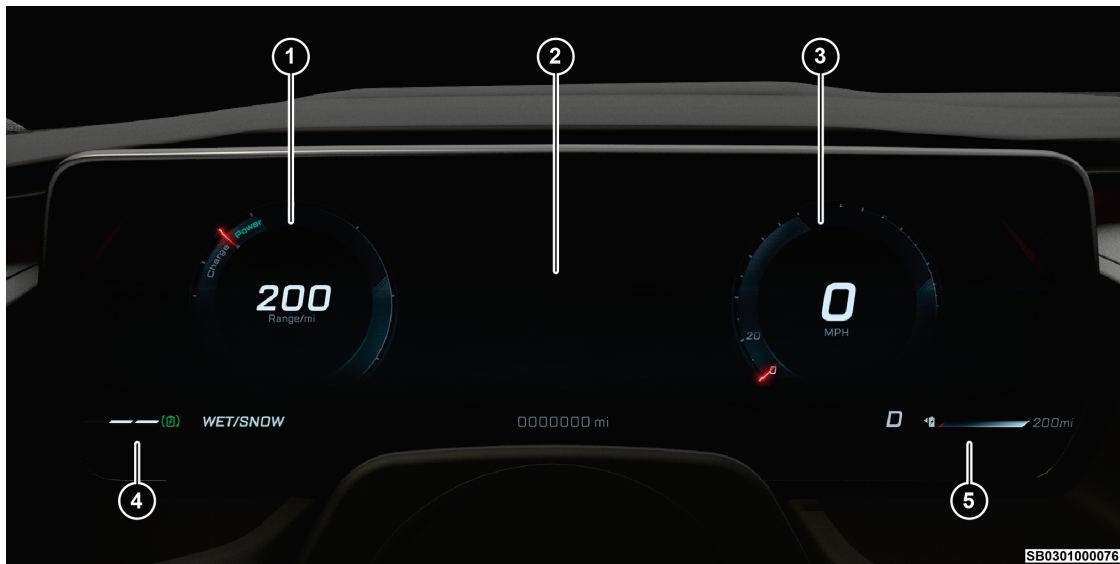


Instrument Cluster Descriptions

Scan this QR code to learn more about the instrument cluster.



1. Charge/Power Gauge — Purple indicates the amount of energy utilized to charge the battery while slowing the vehicle. Red fill indicates the amount of power currently being utilized from the high voltage battery to propel the vehicle.

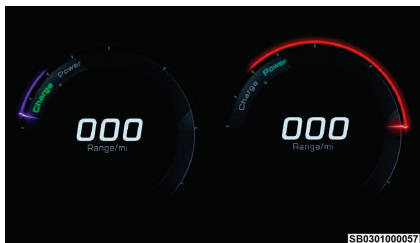

Charge/Power Gauge

2. Main Menu Area — Displays Main Menu items and information.
3. Speedometer — Indicates vehicle speed.

NOTE:

A chime will sound when the vehicle speed is above 120 km/h.

4. Max Regeneration — Indicates number of regen levels available. Regenerative braking replenishes the vehicle's high voltage battery during deceleration.
5. Battery Gauge — Indicates battery percentage. The icon and bargraph change color according to the charging status and level. The arrow next to the battery icon indicates what side of the vehicle the charge port is on.

NOTE:

Some telltales illuminate for a bulb check when the vehicle is first turned on.

LOCATION AND CONTROLS

The instrument cluster display features an interactive display which is located in the instrument cluster.




SB0301000046

Instrument Cluster Display And Controls Location

- 1 — Instrument Cluster Display Screen
- 2 — Instrument Cluster Display Controls

The system allows the driver to select information by pushing the following buttons mounted on the steering wheel:

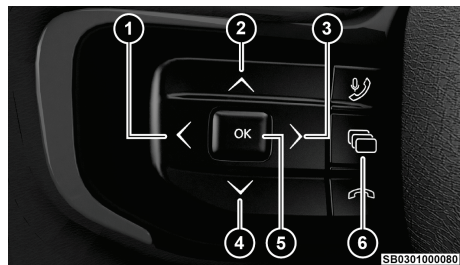

Instrument Cluster Display Controls

- 1 — Left Arrow Button
- 2 — Up Arrow Button
- 3 — Right Arrow Button
- 4 — Down Arrow Button
- 5 — OK Button
- 6 — Layout Button

Left And Right Arrow Buttons:

Use the **left** ◀ or **right** ▶ arrow button to cycle through the Main Menu items.

Up And Down Arrow Buttons:

Use the **up** ▲ or **down** ▼ arrow button to cycle through the submenus of the Main Menu items.

NOTE:

- Holding the **up** ▲ or **down** ▼ or **left** ◀ or **right** ▶ arrow button will continuously loop through the currently selected menu or options presented on the screen.
- Upon returning to a Main Menu, the last submenu screen viewed within that Main Menu will be displayed.

OK Button:

For Digital Speedometer:

- Pushing the **OK** button changes units (mph or km/h) when in the Speedometer Main menu.

For Screen Setup:

- **OK** button allows user to enter menu and submenus.
- Within each submenu layer, the **up** ▲ and **down** ▼ arrow buttons will allow the user to select the item of interest.
- Pushing the **OK** button makes the selection and a confirmation screen will appear (returning the user to the first page of the submenu).
- The left or right arrow buttons navigate to the adjacent menus.

Layout Button:

Press the Layout button on the steering wheel to toggle between the available cluster layout

options. Selected layout will continue to be displayed going forward.

- Classic: default layout characterized by analog circular gauges.
- Center: characterized by a centered speedometer and no main menu bar.
- Navigation: characterized by navigation map and control in cluster.

Storage Mode — If Equipped

The Storage Mode helps to preserve the battery life. It may disable some features during vehicle storing. On the Battery Voltage screen in Vehicle Information, hold the OK button and follow the on-screen messages. To exit Storage Mode, start the vehicle.

WARNING!

- The Rear Seat Reminder Alert is not available when the vehicle is in Storage Mode.
- Make sure to check the rear seats for children and animals before engaging Storage Mode.



Storage Mode Activation Location

WARNING LIGHTS AND MESSAGES

Warning lights, indicators, and messages appear to signify various vehicle conditions. See the Quick Start Guide or Owner's Manual for examples and detailed descriptions. Some telltales are optional according to vehicle equipment.

INTERIOR COMFORT SETTINGS

CLIMATE CONTROLS

Scan this QR code to learn more about Climate Controls.



The Climate Control system allows you to regulate the temperature, air flow, and direction of air circulating throughout the vehicle. The controls are located on the touchscreen and on the instrument panel below the radio.

AUTOMATIC CLIMATE CONTROL DESCRIPTIONS AND FUNCTIONS



Uconnect 5 With 12.3-inch Display Automatic Climate Controls

MAX A/C Button



Press and release the MAX A/C button on the touchscreen to automatically turn the air conditioning on to the coldest temperature setting and the highest blower speed.

A/C Button



Push the button to engage the Air Conditioning (A/C) system.

Recirculation Button



Push the button to change the system between Recirculation mode and outside air mode.

Auto/Auto Eco Button



Press and release the Auto/AutoEco button to toggle between Auto and AutoEco. This activates the comfort settings to automatically control the front driver and passenger area's comfort by adjusting distribution and the amount of airflow. When the AutoEco button is selected, the climate system will be controlled to optimize for energy savings, but comfort may be compromised.

SYNC Button



Press the SYNC button on the touchscreen to synchronize the driver and front passenger temperature settings.

Front Defrost Button

Push the button to change the current airflow setting to Defrost mode.

Rear Defrost Button

Push the button to turn on the rear window defroster and heated mirrors.

CAUTION!

Failure to follow these cautions can cause damage to the heating elements:

- Use care when washing the inside of the rear window. Do not use abrasive window cleaners on the interior surface of the window. Use a soft cloth and a mild washing solution, wiping parallel to the heating elements. Labels can be peeled off after soaking with warm water.
- Do not use scrapers, sharp instruments, or abrasive window cleaners on the interior surface of the window.
- Keep all objects a safe distance from the window.

Driver And Passenger Temperature Up And Down Buttons

Press and slide the temperature bar towards the red arrow button on the touchscreen for warmer temperature settings. Press and slide the temperature bar towards the blue arrow button

on the touchscreen for cooler temperature settings.

Blower Control

Use the blower bar on the touchscreen to increase or decrease the amount of air forced through the climate control system.

Mode Control

Selecting Mode control on the touchscreen allows you to cycle between Panel Mode, Bi-Level Mode, Floor Mode, and Mix Mode.

Climate Control OFF Button

Press the button to turn the climate control system off.

AUTOMATIC TEMPERATURE CONTROL (ATC)

Automatic Operation

1. Push the AUTO button within the climate screen on the touchscreen.
2. Select the desired temperature on the touchscreen. The system then achieves and automatically maintains that comfort level.

NOTE:

There will be no need for you to move the temperature settings for cold or hot

vehicles. The system automatically adjusts the temperature, mode, and blower speed to provide comfort as quickly as possible.

CLIMATE VOICE COMMANDS

You can adjust the vehicle's temperature hands-free while you're driving.

Push the VR/Phone button . After the beep, say one of the following commands:

- "Set the driver temperature to [Desired Temperature] degrees"
- "Set the passenger temperature to [Desired Temperature] degrees"

Voice Command for Climate may only be used to adjust the interior temperature of the vehicle. Voice Command will not work to adjust the heated seats or steering wheel if equipped.

FRONT HEATED SEATS



Press the heated seat button to switch between heat settings and to turn the feature off.

WARNING!

- Persons who are unable to feel pain to the skin because of advanced age, chronic illness, diabetes, spinal cord injury,

(Continued)

WARNING!

medication, alcohol use, exhaustion or other physical condition must exercise care when using the seat heater. It may cause burns even at low temperatures, especially if used for long periods of time.

- Do not place anything on the seat or seatback that insulates against heat, such as a blanket or cushion. This may cause the seat heater to overheat. Sitting in a seat that has been overheated could cause serious burns due to the increased surface temperature of the seat.


FRONT VENTILATED SEATS — IF EQUIPPED



Press the ventilated seat button to switch between ventilation settings and to turn the feature off.

POWER ADJUSTMENT (FRONT SEATS) — IF EQUIPPED

Some models may be equipped with twelve-way or eight-way power driver and front passenger seats. The power seat switches are located on the outboard side of the seat. There are four switches that control the movement of the seat cushion and the seatback.

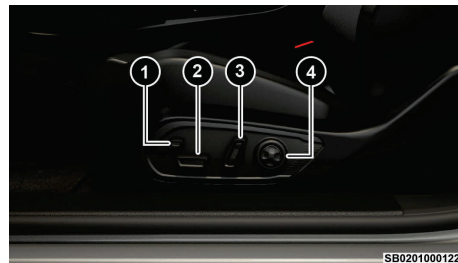

Power Seat Switches

- 1 — Cushion Length Adjuster
- 2 — Seat Control Forward/Back and Up/Down
- 3 — Seatback Control Forward And Backward
- 4 — Power Lumbar

REAR SEAT EASY ENTRY (2-DOOR MODELS) — IF EQUIPPED

Scan this QR code to learn more about rear seat easy entry operation.



Some models may be equipped with an Easy Entry feature on the front seats, allowing for improved access to the rear seats. The Easy Entry function is available with both power and manual seats for forward and rearward adjustment.

To operate the Rear Seat Easy Entry feature:

1. Pull up on the EZE strap located on the back of the seat just below the headrest.



Seat EZE Strap

2. Rotate the seatback forward.



Rotate Seatback Forward

3. **For power seats:** Once the seatback begins to tilt forward, the seat tracks automatically move forward.

For manual seats: Tilt the seatback forward and push until the seat has slid fully forward.

To return the power seat to original position:

Rotate the seatback rearward until it re-locks. For power seats, the seat tracks will automatically move back to its previous position. For manual seats, push the seat back until the seat track is locked into place.

DRIVER MEMORY SETTINGS — IF EQUIPPED

This feature allows the driver to save up to two different memory profiles for easy recall through a memory switch. Each memory profile

saves desired position settings for the following features:


- Driver seat
- Easy Entry/Exit seat (if equipped)
- Side mirrors (if equipped)
- Power tilt/telescoping steering column (if equipped)
- A set of desired radio station presets

NOTE:

- Your vehicle is equipped with two key fobs, each can be linked to either memory position 1 or 2.
- Be sure to program the radio presets prior to programming the memory settings.

The memory settings switch is located on the driver's door trim panel. The switch consists of three buttons:

- The set (S) button, which is used to activate the memory save function.
- The (1) and (2) buttons which are used to recall either of two saved memory profiles.

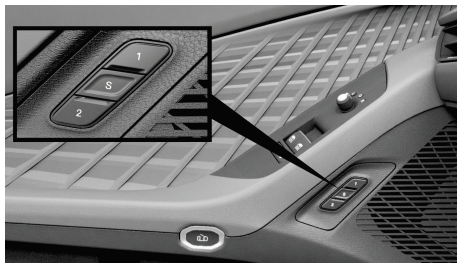

Memory Setting Switch

HEAD RESTRAINTS

Head restraints are designed to reduce the risk of injury by restricting head movement in the event of a rear impact. Head restraints should be adjusted so that the top of the head restraint is located above the top of your ear.

WARNING!

- All occupants, including the driver, should not operate a vehicle or sit in a vehicle's seat until the head restraints are placed in their proper positions in order to minimize the risk of neck injury in the event of a crash.
- Head restraints should never be adjusted while the vehicle is in motion. Driving a

(Continued)

WARNING!

vehicle with the head restraints improperly adjusted or removed could cause serious injury or death in the event of a collision.

Front Head Restraints


Your vehicle is equipped with either front two-way driver and passenger head restraints or fixed front head restraints.

Two-Way Head Restraints — If Equipped

To raise the head restraint, pull upward on the head restraint. To lower the head restraint, push the adjustment button, located at the base of the head restraint, and push downward on the head restraint.

NOTE:

The head restraints should only be removed by qualified technicians, for service purposes only. If either of the head restraints require removal, see an authorized dealer.

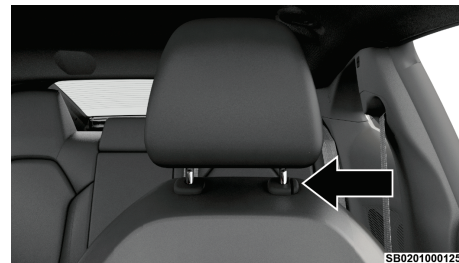

Head Restraint Adjustment Button

Fixed Front Head Restraints — If Equipped

The non-adjustable head restraints consist of a trimmed foam covering over the upper structure of the seatbacks and are intended to help protect you and the passenger from neck injury.

Adjust the seatbacks to their upright, on-road positions so that the head restraint is positioned as close as possible to the back of your head.

Rear Head Restraints

The center head restraint has two adjustable positions: up or down. When the center seat is being occupied, the head restraint should be in the raised position. When there are no occupants in the center seat, the head restraint can be lowered for maximum visibility for the driver.

To raise the head restraint, pull upward on the head restraint. To lower the head restraint, push the adjustment button located at the base of the head restraint and push downward on the head restraint.



Adjustment Button

NOTE:

- The head restraint should only be removed by qualified technicians, for service purposes only. If the center rear head restraint requires removal, see an authorized dealer.
- The outboard head restraints are not adjustable.


WARNING!

ALL the head restraints MUST be reinstalled in the vehicle to properly protect the occupants. Follow the reinstallation instructions prior to operating the vehicle or occupying a seat.

EXTERIOR LIGHTS

HEADLIGHT SWITCH

The headlight switch is located on the left side of the instrument panel. This switch controls the operation of the headlights, parking lights, and instrument panel lights.

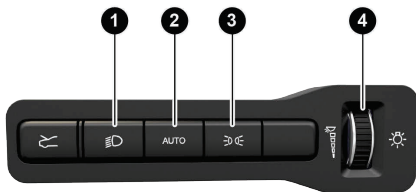

Headlight Switch

- 1 — Low Beam On/Off Control
- 2 — AUTO Headlight Control
- 3 — Parking Lights Control
- 5 — Instrument Panel Dimmer Control

NOTE:

Vehicles sold in Canada are equipped with a headlight switch with an AUTO and ON detent but without an OFF detent. Headlights will be deactivated when the headlight switch is placed in the parking lights position. However, the Daytime Running Lights (DRLs) will be activated along with the front and rear marker lights. The DRLs may be deactivated when the parking brake is engaged.

To turn on the low beams, press the low beam control button. When the low beam switch is on, the parking lights, taillights, license plate light and instrument panel lights are also turned on. To turn off the low beams, press the low beam control button a second time.

For vehicles sold in Canada, press the AUTO headlight button for automatic headlights. Press the second detent to turn on headlights, parking lights, and instrument panel lights operation.

NOTE:

- Your vehicle is equipped with plastic headlight lenses that are lighter and less susceptible to stone breakage than glass lights. Plastic is not as scratch resistant as glass and therefore

different lens cleaning procedures must be followed.

- To minimize the possibility of scratching the lenses and reducing light output, avoid wiping with a dry cloth. To remove road dirt, wash with a mild soap solution followed by rinsing.

CAUTION!

Do not use abrasive cleaning components, solvents, steel wool or other abrasive materials to clean the lenses.

AUTOMATIC HIGH BEAM — IF EQUIPPED

Did you know your vehicle can automatically switch from high beams to low beams until an approaching vehicle is out of view?

To turn on this feature:

1. Within the Uconnect system, set “Auto Dim High Beams” to “ON”.
2. Push the AUTO button on the headlight switch.
3. Push the multifunction lever toward the instrument panel to switch the headlights to the high beam position.

AUTOMATIC HEADLIGHTS

With the vehicle power button in the ON/RUN position, make sure the AUTO button is selected on your headlight switch; your vehicle will detect how bright it is outside and turn the headlights on/off as necessary.

AUTOMATIC HEADLIGHTS ON With WIPERS — If Equipped

If your vehicle is equipped with Automatic Headlights, it also has this customer-programmable feature. When your headlights are in the automatic mode and the vehicle is running, they will automatically turn on when the wiper system is on. This feature is programmable through the Uconnect system.


NOTE:

When your headlights come on during the daytime, the instrument panel lights will automatically dim to the lower nighttime intensity.

WINDSHIELD WIPERS AND WASHERS

The windshield wiper/washer controls are located on the multifunction lever on the left side of the steering column. The front wipers are

operated by rotating a switch, located on the end of the lever.

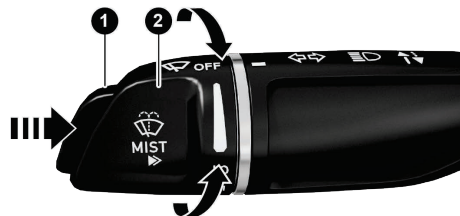

SB0201000285

Windshield Wiper/Washer Control

- 1 — Tap For Mist Or Hold For Washer
- 2 — Rotate For Front Wiper Operation

WINDSHIELD WIPER OPERATION

NOTE:

Prior to activating the wiper system, manually clear excessive and unusually heavy snow/ice from windshield and cowl area.

Front Wipers

Rotate the end of the lever upward, to the first detent past the intermittent settings for low-speed wiper operation.

Rotate the end of the lever upward to the second detent past the intermittent settings for high-speed wiper operation.

Windshield Washers

To use the windshield washer, push the washer knob, located on the end of the multifunction lever, inward and hold. Washer fluid will be sprayed and the wipers will operate for two to three cycles after the washer knob is released.

Mist

Tap the washer knob inward briefly and release. The wipers will cycle one time and automatically shut off.

NOTE:

The mist feature does not activate the washer pump; therefore, no washer fluid will be sprayed on the windshield. The washer function must be used in order to spray the windshield with washer fluid.

WARNING!

Sudden loss of visibility through the windshield could lead to a collision. You might not see other vehicles or other obstacles. To avoid sudden icing of the windshield during freezing weather, warm the windshield with the defroster before and during windshield washer use.

CAUTION!

Always remove any buildup of snow that prevents the windshield wiper blades from returning to the parked position. If the windshield wiper switch is turned off, and the blades cannot return to the parked position, damage to the wiper motor may occur.

RAIN SENSING WIPERS — IF EQUIPPED

This feature senses rain or snowfall on the windshield and automatically activates the wipers. Rotate the end of the multifunction lever to one of four detent positions to activate this feature.

NOTE:

The Rain Sensing feature can be turned on and off using the Uconnect system.

CRUISE CONTROL SYSTEMS

Your vehicle is equipped with the Adaptive Cruise Control (ACC) system which will adjust the vehicle speed up to the preset speed to maintain a distance with the vehicle ahead.

ADAPTIVE CRUISE CONTROL (ACC)

Adaptive Cruise Control (ACC) increases the driving convenience provided by Cruise Control. However, it is not a safety system and not designed to prevent collisions.

ACC will allow you to keep Cruise Control engaged in light to moderate traffic conditions without the constant need to reset your Cruise Control. ACC utilizes a radar sensor and a forward facing camera designed to detect a vehicle directly ahead of you.

NOTE:

- If the ACC sensor detects a vehicle ahead, ACC will apply limited braking or acceleration (not to exceed the original set speed) automatically to maintain a preset following distance, while matching the speed of the vehicle ahead.
- Any chassis/suspension or tire size modifications to the vehicle will affect the performance of the Adaptive Cruise Control and Forward Collision Warning system.

WARNING!

- Adaptive Cruise Control (ACC) is a convenience system. It is not a substitute for active driver involvement. It is always the driver's responsibility to be attentive

(Continued)

WARNING!

of road, traffic, and weather conditions, vehicle speed, distance to the vehicle ahead and, most importantly, brake operation to ensure safe operation of the vehicle under all road conditions. Your complete attention is always required while driving to maintain safe control of your vehicle. Failure to follow these warnings can result in a collision and death or serious personal injury.

- The ACC system:
 - Does not react to pedestrians, oncoming vehicles, and stationary objects (e.g., a stopped vehicle in a traffic jam or a disabled vehicle).
 - Cannot take street, traffic, and weather conditions into account, and may be limited upon adverse sight distance conditions.
 - Does not always fully recognize complex driving conditions, which can result in wrong or missing distance warnings.
 - Will bring the vehicle to a complete stop and hold the vehicle in the stop position for approximately 10 minutes when following a vehicle ahead. If the vehicle ahead does not start moving within 10 minutes, the parking brake will

(Continued)

WARNING!

be activated, and the ACC system will be canceled.

You should switch off the ACC system:

- When driving in fog, heavy rain, heavy snow, sleet, heavy traffic, and complex driving situations (i.e., in highway construction zones).
- When entering a turn lane or highway off-ramp; when driving on roads that are winding, icy, snow-covered, slippery, or have steep uphill or downhill slopes.
- When towing a trailer up or down steep slopes.
- When circumstances do not allow safe driving at a constant speed.

Adaptive Cruise Control (ACC) Operation

The buttons on the right side of the steering wheel operate the ACC system.



Adaptive Cruise Control Buttons

- 1 — Distance Setting Increase
- 2 — Adaptive Cruise Control (ACC) On/Off
- 3 — CANCEL/Cancel
- 4 — Distance Setting Decrease
- 5 — SET (+)/Accel
- 6 — RES/Resume
- 7 — Advanced Driving Assist (ADA) Button
- 8 — SET (-)/Decel

UNIVERSAL GARAGE DOOR OPENER (HOMELINK®)

Scan this QR code to learn more about the garage door opener (HomeLink®).



HomeLink® Buttons And Indicator Light

The HomeLink® buttons are located in the overhead console or sun visor and contain three optional HomeLink® channels.

- **TO ERASE ALL SET CHANNELS:** Push and hold the two outside HomeLink® buttons for

20 seconds until the indicator flashes above the buttons.

- **ROLLING OR NON-ROLLING?** Check your garage door opener motor in your garage for a “LEARN” or “TRAIN” button by the hanging antenna. If you have one of these, you have a Rolling Code garage door opener.

1. While the car is ON, hold the handheld garage door transmitter 1-3 inches from the HomeLink® button you want to program in the vehicle.
2. Push and hold both the HomeLink® button being programmed and the button on the garage door transmitter.
3. **For Non-Rolling Code** garage door openers, watch for the indicator light to stay illuminated.
4. **For Rolling Code** garage door openers, watch for the indicator light to go from a slow blink to blinking rapidly.



If you have any problems, or require additional assistance, please call toll-free 1-800-355-3515 or visit HomeLink.com.

NOTE:

If the programming was successful, your garage door should open and close with your chosen HomeLink® button.

TROUBLESHOOTING TIPS

If you are having trouble programming HomeLink®, here are some of the most common solutions:

- Replace the battery in the garage door opener hand-held transmitter.
- Push the LEARN button on the garage door opener to complete the training for a rolling code.
- Did you unplug the device for programming and remember to plug it back in?

If you have any problems, or require assistance, please call toll-free 1-800-355-3515 or visit HomeLink.com.

WARNING!

Your motorized door or gate will open and close while you are programming the universal

(Continued)

WARNING!

transmitter. Do not program the transmitter if people, pets or other objects are in the path of the door or gate. Only use this transmitter with a garage door opener that has a “stop and reverse” feature as required by Federal safety standards. This includes most garage door opener models manufactured after 1982. Do not use a garage door opener without these safety features.

PARKING ASSISTANCE

PARKSENSE FRONT/REAR PARK ASSIST SYSTEM

The ParkSense Park Assist system provides visual and audible indications of the distance between the rear and the front fascia/bumper and a detected obstacle when backing up or moving forward (e.g. during a parking maneuver). The vehicle brakes may be automatically applied and released when performing a reverse parking maneuver if the system detects a possible collision with an obstacle.

NOTE:

- The driver can disable the automatic braking function by turning ParkSense off via the ParkSense switch. The driver can also override

automatic braking by changing the gear or by pressing the accelerator over 90% of its capacity during the braking event.

- Automatic brakes will not be available if there is a faulted condition detected with the ParkSense Park Assist system or the Braking System Module.
- The automatic braking function may only be applied if the vehicle deceleration is not enough to avoid colliding with a detected obstacle.
- The automatic braking function may not be applied fast enough for obstacles that move toward the rear of the vehicle from the left and/or right sides.
- The automatic braking function can be enabled/disabled from the Customer Programmable Features section of the Uconnect system.
- ParkSense will retain its last known configuration state for the automatic braking function through run cycles.

The automatic braking function is intended to assist the driver in avoiding possible collisions with detected obstacles when backing up in REVERSE gear.

NOTE:

- The system is designed to assist the driver and not to substitute the driver.

- The driver must stay in full control of the vehicle's acceleration and braking and is responsible for the vehicle's movements.

ParkSense will retain the last system state (enabled or disabled) from the last run cycle when the vehicle is changed to the ON/RUN position.

ParkSense can be active only when the gear selector is in REVERSE or DRIVE. If ParkSense is enabled at one of these gear selector positions, the system will remain active until the vehicle speed is increased to approximately 7 mph (11 km/h) or above. The system will become active again if the vehicle speed is decreased to less than approximately 6 mph (9 km/h). A display warning will appear in the instrument cluster display if the vehicle is in REVERSE and the speed exceeds 7 mph (11 km/h).

ELECTRIC PARK BRAKE (EPB)

Scan this QR code to learn more about Electric Park Brake (EPB).



Your vehicle is equipped with an Electric Park Brake system that offers simple operation, and


some additional features that make the parking brake more convenient and useful.

The parking brake is primarily intended to prevent the vehicle from rolling while parked. Before leaving the vehicle, make sure that the parking brake is applied. Also, be certain to leave the gear selector/shifter in PARK.

You can engage the parking brake in two ways:

- Manually, by applying the EPB switch.
- Automatically, by enabling the Auto Park Brake feature in the Customer Programmable Features section of the Uconnect settings
⇒ page 12.

The EPB switch is located in the center console.

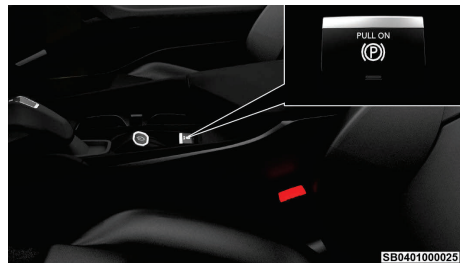

Electric Park Brake Switch

To apply the parking brake manually, pull up on the switch momentarily. You may hear a sound from the back of the vehicle while the parking brake engages. Once the parking brake is fully engaged, the Brake Warning Light in the instrument cluster and an indicator on the switch will illuminate. If your foot is on the brake pedal while you apply the parking brake, you may notice a small amount of brake pedal movement. The parking brake can be applied even when the power button is OFF and can only be released when the power button is in the ON/RUN position.

To release the parking brake manually, the power button must be in the ON/RUN position. Put your foot on the brake pedal, then push the EPB switch down momentarily. You may hear a sound from the back of the car while the parking brake disengages. You may also notice a small amount of movement in the brake pedal. Once the parking brake is fully disengaged, the Brake Warning Light in the instrument cluster and the LED indicator on the switch will extinguish.

WARNING!

- Do not rely on the parking brake to operate effectively if the rear brakes have been immersed in water or mud.

(Continued)

WARNING!

- Never use the PARK position as a substitute for the parking brake. Always apply the parking brake fully when parked to guard against vehicle movement and possible injury or damage.
- When leaving the vehicle always cycle the Start button OFF, remove the key fob and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Start button of a vehicle equipped with Keyless Enter 'n Go™ in the ACC or ON/RUN position. A child could operate power windows, other controls, or move the vehicle.
- Be sure the parking brake is fully disengaged before driving; failure to do so can lead to brake failure and a collision.

(Continued)

WARNING!

- Always fully apply the parking brake when leaving your vehicle, or it may roll and cause damage or injury. Also be certain to leave the gear selector in PARK. Failure to do so may allow the vehicle to roll and cause damage or injury.

WARNING!

Driving the vehicle with the parking brake engaged, or repeated use of the parking brake to slow the vehicle, may cause serious damage to the brake system. Be sure the parking brake is fully disengaged before driving; failure to do so can lead to brake failure and a collision.

CAUTION!

If the Brake System Warning Light remains on with the parking brake released, a brake system malfunction is indicated. Have the brake system serviced by an authorized dealer immediately.

EXTERIOR OVERVIEW



SB0201001895

1 — Exterior Camera Locations ➞ page 35

2 — Charging Port ➞ page 45

3 — Hatch Release Button ➞ page 38

EXTERIOR CAMERA VIEWS

SURROUND VIEW CAMERA SYSTEM



Press this button on the touchscreen to enter the Surround View Camera menu in the Uconnect system.

When the vehicle is shifted into REVERSE, the Rear View or Top View is the default view of the system.

WARNING!

Drivers must be careful when backing up even when using the Surround View Camera. Always check carefully behind your vehicle, and be sure to check for pedestrians, animals, other vehicles, obstructions, or blind spots before backing up. You are responsible for the safety of your surroundings and must continue to pay attention while backing up. Failure to do so can result in serious injury or death.

CAUTION!

- To avoid vehicle damage, Surround View should only be used as a parking aid. The Surround View camera is unable to view every obstacle or object in your drive path.

(Continued)

CAUTION!

- To avoid vehicle damage, the vehicle must be driven slowly when using Surround View to be able to stop in time when an obstacle is seen. It is recommended that the driver look frequently over his/her shoulder when using Surround View.

MANUAL DOOR LATCHING/ UNLATCHING

Your vehicle is equipped with frameless glass doors. The frameless glass door system is equipped with a smart drop feature that ensures the glass lowers slightly when the door is opened. This function prevents the glass edge from making contact with the metal retainer that attaches the door seal to the vehicle. This feature relies on the vehicle having power.

In the event of a power failure please see the following sections for steps and precautions on manual door operation.

If the windows are in the full up position:


When the vehicle has lost power, the smart drop feature will not function properly, and opening or closing the doors can result in damage to the glass or the door seals.

CAUTION!

If your vehicle loses power, avoid operating the doors until power is restored or damage to the glass or seal could result.


If the windows are in the full-down or partially-down position:

1. To manually unlatch the driver door, first remove the cover plate over the latch release cylinder on the door handle. Use the emergency key from the key fob to pry off the cover, as shown in the following example:

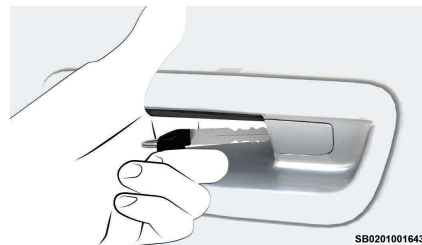


Door Latch Release Cover

2. Insert the emergency key from the key fob into the latch release and turn it toward the rear of the vehicle. This will unlatch the door, allowing you to access the vehicle.

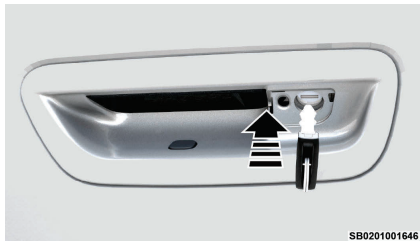

Latch Release


3. Replace the latch release cover by first inserting the tab on the right (1), then gently pushing in the tab on the left (2) until it clicks into place.

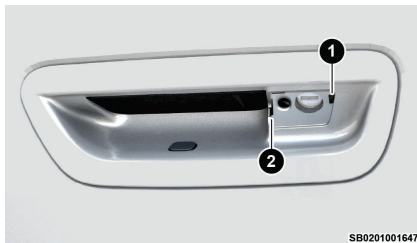

Replacing The Cover

Latching The Door

All doors can be manually latched by turning the latch cylinder in the inside door frame. Using the emergency key from the key fob, turn the latch and then shut the door.

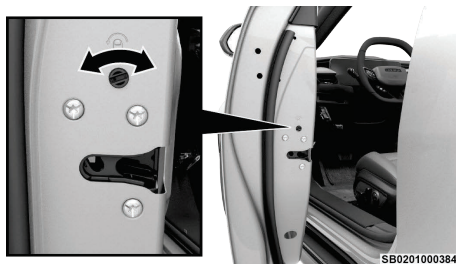

Door Close Manual Latch

WARNING!

- For personal security and safety in the event of a collision, lock the vehicle doors before you drive as well as when you park and leave the vehicle.
- When exiting the vehicle, always make sure the power button is in the OFF position, remove the key fob from the vehicle and lock your vehicle.
- Never leave children alone in a vehicle, or with access to an unlocked vehicle. Allowing children to be in a vehicle unattended is dangerous for a number of reasons. A child or others could be seriously or fatally injured. Children should be warned not to touch the parking brake, brake pedal or the gear selector.
- Do not leave the key fob in or near the vehicle, or in a location accessible to children, and do not leave the Keyless Enter 'n Go™ Propulsion System in the ON/RUN position. A child could operate power windows, other controls, or move the vehicle.

HOOD

OPENING THE HOOD


WARNING!

EV Models Only

- Always place the start button in the OFF position before opening the hood.
- Some areas remain very hot for a while after driving or charging and may cause serious burns if touched.
- Keep hands, tools, clothing, and jewelry away from the radiator cooling fan when the hood is raised. The cooling fan may start operating at any time, including during charging. Hands or clothing caught in a rotating fan may cause serious injury.

To open the hood:

The Hood Release button is located on the instrument panel to the left of the steering wheel. Press the hood release button once to open the hood.

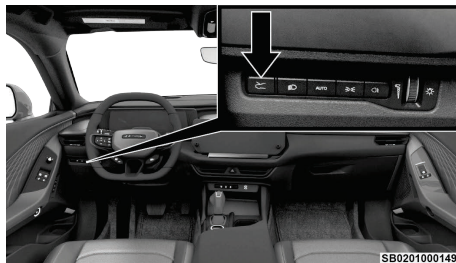

Hood Release Button

NOTE:

- Vehicle must be at a stop and the gear selector must be in PARK.
- While lifting the hood, use both hands.
- Before lifting the hood, check that the wiper arms are not in motion and not in the lifted position.

CLOSING THE HOOD

Be careful when lowering the hood as to not cause damage. Close the hood by following these steps:

1. In one continuous motion, gently lower the hood until it is resting on the latch mechanism.

2. Place two hands on center of hood, above the latch mechanism. Press down firmly until hood is latched.
3. Confirm hood is latched in place.



Hand Placement Zone

CAUTION!

- Do not drop or forcefully close hood. Doing so can cause damage to the hood.
- Only use force on the areas highlighted in the image above. Pressing down on areas outside of this area can cause damage.

WARNING!

Be sure the hood is fully latched before driving your vehicle. If the hood is not fully latched, it could open when the vehicle is in motion and block your vision. Failure to follow this warning could result in serious injury or death.

HATCH

OPENING THE HATCH


The hatch may be opened in several ways:

- Power hatch release button on the overhead console — If Equipped
- Hatch button on the key fob — If Equipped
- Hatch Passive Entry button
- Internal Emergency release handle located on the underside of the decklid overhang



SB0201000777

Power Hatch Release Button

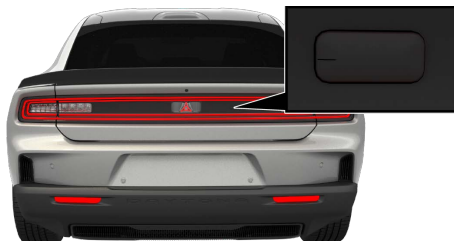

SB0401000083

Hatch Passive Entry Button

CLOSING THE HATCH

There are three ways to close the hatch:

- Manually (grab the hatch closing handle and pull downward)
- Close Hatch button in the cargo area
- Overhead console button (Must be pressed twice within five seconds)

NOTE:

The hatch cannot be closed using the key fob.



SB0201000393

Close Hatch Button

NOTE:

Before closing the hatch lid, make sure your key fob is not inside the hatch area. The hatch will latch then automatically unlock if the key fob is detected, not allowing the key fob to be locked in the hatch area.

CARGO AREA FEATURES

Scan this QR code to learn more about the Cargo Area Features.



Foldable Cargo Area Cover — If Equipped

The purpose of this cover is for privacy, not to secure loads. It will not prevent cargo from shifting or protect passengers from loose cargo.

To cover the cargo area:


1. Locate the cargo cover in the cargo area, unfold using a twisting motion.
2. Identify the bottom of the cargo cover by locating the labels on the left and right cargo cover pins.

3. With the bottom facing down, hook the straps to the inside posts near the outboard rear head restraint on each side.



Step 3

4. Insert the pins on the ends of the cover into the slots on each side of the hatch.

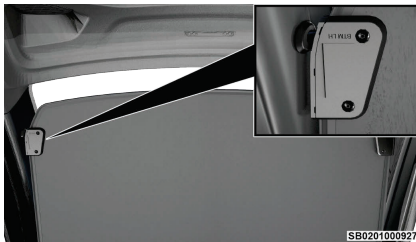


Step 4

NOTE:

The hatch may be opened with the cargo cover in place.

To store the foldable cargo area cover, reverse the installation steps.

To fold the cargo cover, see the following illustration:

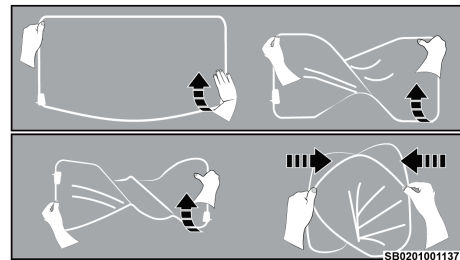

Folding The Cargo Cover

- 1 — With your left hand, grasp the upper left corner and with your right hand, grasp the over the top of the lower right pin.
- 2 — Twist Cover Twice
- 3 — Push Twisted Cover Inward
- 4 — Cover Will Remain Folded For Storage


WARNING!

In a collision, a loose cargo cover in the vehicle could cause injury. It could fly around in a sudden stop and strike someone in the vehicle. Do not store the cargo cover on the cargo floor or in the passenger compartment. Remove the cover from the vehicle when taken from its mounting. Do not store it in the vehicle.

Cargo Storage

The load floor is designed for a maximum load of 187 lb (84 kg), and should be uniformly distributed over the load floor.

Additional storage can be found under the storage lid. To access the lower storage, lift the handle and raise the storage lid.

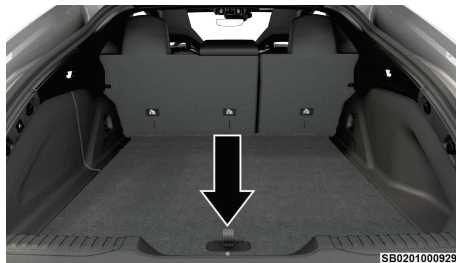

Lift Load Floor Handle

HIGH VOLTAGE BATTERY

This vehicle is equipped with a Lithium-ion high voltage battery that is used to power the electric powertrain systems. The high voltage battery is located underneath the vehicle.

High Voltage Battery Service Disconnect

The high voltage battery service disconnect is located under the load floor of the cargo area, at the front left side.

WARNING!

- Never try to remove the high voltage battery service disconnect. The high voltage battery service disconnect is used when

(Continued)

WARNING!

your vehicle requires service by a qualified technician at an authorized dealership. Failure to follow this warning can result in electrical shock, toxic emissions, fire, and other hazards which can cause death or serious injury including severe burns, respiratory injuries, and blindness.

- The high voltage battery and battery case have no parts that you or an unqualified technician can service. The high voltage system can be hot during and after starting and when the vehicle is shut off or charging. Under no circumstances should you or an unqualified technician open, disassemble, penetrate, or tamper with the high voltage battery, battery case, their cables, or connectors. High Voltage wires, connectors, and wire coverings are identified by their distinct orange color. Damage to these components can result in electrical shock, toxic emissions, fire, and other hazards which can cause death or serious injury including severe burns, respiratory injuries, and blindness. You should take the vehicle to an authorized dealership for any service or maintenance on these high voltage components.

Disposal of the High Voltage Battery

Your vehicle's high voltage battery is designed to last the life of your vehicle.

WARNING!

Your vehicle contains a sealed Lithium-ion high voltage battery. If the battery is disposed of improperly, there is a risk of electrical shock and toxic emissions which can cause severe burns, respiratory injuries, fires, and other hazards resulting in serious injury or death. Bring the vehicle to your dealership when the life of the battery is exhausted.

General Information

The vehicle is also equipped with a Battery Management system that is designed to maximize the life expectancy of the high voltage battery, maximize driving range, and ensure safe operation!

NOTE:

During start up and shut down, a clicking noise may be heard from within the vehicle. When the vehicle is preparing to start, the contactors inside the battery are closed to make the stored electricity inside available for vehicle use. After the vehicle is shut down, the contactors open to electrically isolate the battery from other vehicle systems. The clicking noise is the sound of these

contactors as they open and close during normal operation.

WARNING!

In the event of a collision:

- If your vehicle is still drivable, pull off the road and place the Gear Box in the PARK position, apply the parking brake, and turn the vehicle off.
- To avoid electrical shock which can result in serious injury or death, never touch wiring, connectors, and other high-voltage parts, such as the inverter unit and the Lithium-ion battery. High Voltage wires, connectors, and wire coverings are identified by their distinct orange color.
- Beware of any exposed high-voltage parts or cables. To avoid electrical shock which can result in serious injury or death, never touch wiring, connectors, and other high-voltage parts, such as the inverter unit and the Lithium-ion battery. High Voltage wires, connectors, and wire coverings are identified by their distinct orange color.
- If your vehicle was not in a collision but the undercarriage received an impact from road debris or other source while driving, have the Lithium-ion battery inspected by an authorized dealer.

(Continued)

WARNING!

- Leaks or damage to the Lithium-ion battery may result in a fire and toxic emissions which can cause severe burns, respiratory injuries, and other serious injuries or death. If you discover these leaks, contact emergency services immediately. Since the fluid leak may be Lithium Manganate from the Lithium-ion battery, never touch the fluid leak inside or outside of the vehicle. If the fluid contacts your skin or eyes, wash these areas immediately with a large amount of water and obtain immediate medical attention to help avoid serious injury.
- If a fire occurs in your vehicle, leave the vehicle as soon as possible and contact emergency services. Only use a type ABC, BC, or C fire extinguisher that is meant for use on electrical fires. Using a small amount of water, or the incorrect fire extinguisher can result in serious injury or death from electrical shock.
- If you are not able to safely assess the vehicle due to vehicle damage, do not touch the vehicle. Leave the vehicle and contact emergency services. Advise first responders that this is a electric vehicle.
- In the event of an accident that requires bodywork, refer to an authorized dealership.

(Continued)

WARNING!

- If your vehicle was not in a collision but the undercarriage received an impact from road debris or other source while driving, have the Lithium-ion battery inspected by an authorized dealer.

BATTERY CONDITIONING

In extreme high temperatures, the high voltage battery may need to be conditioned, and therefore is suggested to plug-in the vehicle in order to have the full performance on the next use. In extreme cold temperatures, to preserve the high voltage battery, the available electrical power may be reduced and recharge time increased. The high voltage battery is equipped with systems that guarantee to operate under temperature conditions suitable for its functioning as long as the temperature is higher than -22°F (-30°C). Do not expose the battery to lower temperature.


HIGH VOLTAGE CHARGING OPERATION

SAE J1772 CHARGING INLET

Scan this QR code to learn more about charging the vehicle.



This vehicle uses an industry standard SAE J1772 charge inlet (vehicle charge inlet) for AC Level 1 (120 V), AC Level 2 (240 V), and DC Fast charge (350 V) charging.

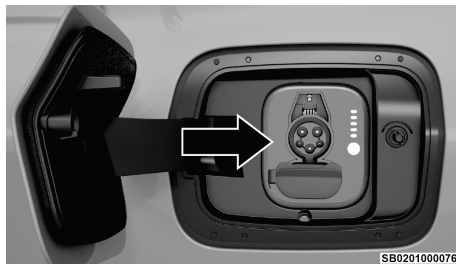

Vehicle Charge Inlet

Open the charge port door by pushing near the rear outer edge of the door, near the center to

unlatch. To close the charge port door, engage the door latch by pushing on the rear outer edge near the center.

NOTE:

Only utilize UL-certified (UL 2594) charging equipment to charge your vehicle. Failure to do so may result in safety hazards.

SMART CHARGE BUTTON

The Smart Charge button to the right of the charge port can be used to stop charging, start charging, and override a set charging schedule. The button has different uses and sequences depending on which charging mode is set.

● No scheduled charge


- Plug in the vehicle: charge starts
- Push the charging button: charge is stopped
- Push the charging button again: charge starts again

● Scheduled charge (not started yet)

- Plug in the vehicle: scheduled charge is ready (as set)
- Push the charging button: charge starts
- Push the charging button again: charge is stopped, and scheduled charge is set again

- **Scheduled charge (set and started)**

- Plug in the vehicle: scheduled charge begins (as set)
- Push the charging button: charge is stopped
- Push the charging button again: immediate charge starts (scheduled charge is overridden)

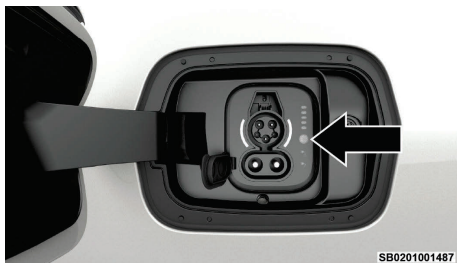

Smart Charging Button

AC LEVEL 1 CHARGING (120 VOLT, 12 AMP) — IF EQUIPPED

This vehicle may be equipped with a 120 Volt AC, SAE J1772 Level 1 Electric Vehicle Supply Equipment (EVSE), also referred to as a Portable Charging Cordset (EVSE). AC Level 1 charging requires a conventional NEMA 5-15R 120 Volt AC

grounded wall outlet along with the Portable Charging Cordset (EVSE) provided with the vehicle.

WARNING!

Please be sure to follow these warnings. Failure to do so may result in serious injury or death.

- Discontinue use of the Portable Charging Cordset (EVSE) immediately if the plug or outlet becomes hot to the touch or if you notice any unusual odors.
- Do not use the Portable Charging Cordset (EVSE) in building structures that use fuse-based circuit protection. Use only with electrical circuits protected by circuit breakers.
- Do not use the Portable Charging Cordset (EVSE) if other devices are plugged into the same circuit.
- When unplugging the Portable Charging Cordset (EVSE) from the wall outlet, be sure to pull by the plug, and not the cord.
- Do not pull, twist, bend, step on or drag the cord of the Portable Charging Cordset (EVSE).
- Stop using the Portable Charging Cordset (EVSE) immediately if charging stops before

(Continued)

WARNING!

it's completed when the plug or cord is moved or adjusted.

- Do not use the Portable Charging Cordset (EVSE) if the plug has a loose connection with the wall outlet or if the wall outlet is damaged or rusted.
- If in any doubt about the wall outlet and/or circuit, contact a qualified electrician.
- Do not use if a malfunction occurs or if the Portable Charging Cordset has been damaged in any manner. It is recommended that you contact an authorized dealership.
- There are no user serviceable parts inside the Portable Charging Cordset (EVSE). Do not attempt to repair or service the Portable Charging Cordset (EVSE), doing so will void the New Vehicle Warranty.

WARNING!

Electrical shock, fire, and other serious hazards can occur if the Portable Charging Cordset (EVSE) is not used properly. This vehicle uses a high voltage current. Failure to follow the proper charging instructions in this publication can cause serious injury or death. There are no serviceable parts in the Portable Charging Cordset (EVSE). Do not open,

(Continued)

WARNING!

disassemble, penetrate, or tamper with the Portable Charging Cordset (EVSE). Failure to follow this warning can result in electrical shock, fire, property damage, and death or serious injury.

NOTE:

The Portable Charging Cordset (EVSE) is used for AC Level 1 charging only.

WARNING!

This publication contains important instructions and warnings that should be followed during charging operations. Failure to follow these warnings and instructions can result in electrical shock and fire which can cause death or serious injury.

- Do not put fingers or objects into the Portable Charging Cordset (EVSE) connector.
- Do not use the Portable Charging Cordset (EVSE) if the flexible power cord is frayed, broken, has cracked insulation, or any other signs of damage.
- Do not use the Portable Charging Cordset (EVSE) if the enclosure or the connector is

(Continued)

WARNING!

broken, cracked, open, or shows any other indication of damage.

- Do not use the Portable Charging Cordset (EVSE) with an extension cord or plug adapters.
- The Portable Charging Cordset (EVSE) may attempt to reset and run after a power interruption.
- There are no user serviceable parts inside the Portable Charging Cordset (EVSE). Do not attempt to repair or service the Portable Charging Cordset (EVSE) yourself – personal injury may result.
- When using a charging station with the Portable Charging Cordset (EVSE) attached, ensure the charging station's cable is not visibly damaged before plugging into the vehicle.
- Do not allow children to operate the Portable Charging Cordset (EVSE). Adult supervision is mandatory when children are in proximity to the charge station that is in use.
- Do not use a charge station or vehicle charge inlet that is worn or damaged with the charging cable. Plugging into worn or damaged receptacles may cause damage to

(Continued)

WARNING!

the Portable Charging Cordset (EVSE) and vehicle.

- Ensure that the Portable Charging Cordset (EVSE) is always stored in a safe place. Do not expose the EVSE J1772 vehicle connector to rain or wet conditions. Avoid allowing water or other liquids to pour or drip onto the vehicle connection end of the J1772 EVSE connector. If water penetrates the electrical device, the risk of electrical shock increases. Ensure that all plugs and cables are free of moisture before using the Portable Charging Cordset (EVSE).
- In a collision, a loose Portable Charging Cordset (EVSE) in the vehicle could cause injury. It could fly around in a sudden stop and strike someone in the vehicle. Do not store the Portable Charging Cordset (EVSE) on the cargo load floor, or in the passenger compartment.
- The Portable Charging Cordset (EVSE) has been tested for use in temperatures ranging from -40°F to 122°F (-40°C to 50°C).
- The Portable Charging Cordset (EVSE) should be stored at temperatures between -40°F and 176°F (-40°C and 80°C).

EVSE Charging Cordset

The Portable Charging Cordset (EVSE) is compliant with SAE J1772, and applicable for use with vehicles fitted with standard SAE J1772 charge inlets. The Portable Charging Cordset (EVSE) includes:



Charging Cordset

- 1 — Status Indicator Display
- 2 — Charge Cable
- 3 — Charge Connector
- 4 — AC Plug

Charging Cordset Operation

1. Insert the AC plug prongs of the Portable Charging Cordset (EVSE) into a grounded wall outlet. Do not use an extension cord, outlet/plug adapter, or a worn outlet. The Portable Charging Cordset (EVSE) will not

operate safely unless it is plugged directly into the wall outlet.


NOTE:

The Portable Charging Cordset (EVSE) should be plugged into a dedicated circuit, not a circuit shared with other devices drawing electricity on the circuit.

WARNING!

Do not use the Portable Charging Cordset (EVSE) on electrical circuits with two-prong outlets; use with improper outlets could result in electric shock, fire, property damage, and death or serious injury. Check with a qualified electrician if you are in doubt as to whether the wall outlet is properly grounded. Do not modify the plug prongs provided with the Portable Charging Cordset (EVSE) - if it does not fit the outlet, you must have a proper outlet installed by a qualified electrician.

2. Check to see if the Portable Charging Cordset (EVSE) is ready to charge by reviewing the indicator lights. After a brief self-check, where the indicator lights will flash, a green AC Power indicator light and two green Charge Active indicator lights indicate that the Portable Charging Cordset (EVSE) is ready for use.

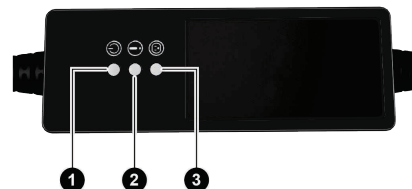

SB0201000200

Cordset Indicator Lights

- 1 — AC Power Indicator Light
- 2 — Fault Indicator Light
- 3 — Charge Active Indicator Lights

3. If the Portable Charging Cordset (EVSE) is ready to charge, ensure the vehicle is in PARK, and then connect the charge connector to the vehicle's charge inlet. You will hear a "click" when the charge connector is inserted correctly and coupled with the vehicle's charge inlet. There will be a delay once the charging cordset is plugged into the vehicle and the vehicle begins charging.
4. When the vehicle commences charging, the Charge Active indicator lights on the Portable Charging Cordset (EVSE) will cycle from left to right, and then both turn off. This pattern will repeat while the vehicle is

charging. The lights are illuminated at the rate of approximately one cycle per second.

NOTE:

The vehicle should start charging automatically. If not, please check the following:

- Wall Outlet — Check whether the wall outlet is functional (no power outage) and/or plug the Portable Charging Cordset (EVSE) into a different wall outlet.
 - Charging Schedule — Check whether or not the charging schedules have been enabled. If enabled, check that you are within the scheduled time and day of the week. If a charging schedule has been enabled in the vehicle, and it is outside the time and day of the week, you may override the schedule for this charging event by plugging in the charge connector, unplugging it, and then plugging it back into the vehicle charge inlet. Complete the double plug sequence within 10 seconds for it to override the set schedule.
5. To stop the charging process, the charging cordset will need to be unlocked from the vehicle. To unlock the cordset, press the Unlock button on the key fob to unlock the doors and then press the button on the

charging cordset connector or the Smart Charge button next to the charging port. There will be a delay before the cordset can be removed from the vehicle. White courtesy lights will flash around the charging port once the connector has unlocked.

6. To disengage the vehicle coupler, push the button on the connector and gently pull the cordset from vehicle.



Removing The Charge Connector From The Vehicle Charge Inlet

7. Close the inlet door when a Portable Charging Cordset (EVSE) is not connected to the vehicle.

NOTE:

It is good practice to keep the vehicle in the OFF position while conducting Level 1 charging. This minimizes any additional vehicle loads the Portable Charging Cordset (EVSE) has

to support. The additional electrical loads will extend the high voltage battery charging time.

Troubleshooting Using The Status Indicator Display

If the vehicle is not charging properly, consult the status indicator lights.

The **Yellow LED** signals a failure with the outlet.

The **Red LED** signals a failure in the charging system.

The **Green LED** signals correct operation of the system.

Any faults in charging are displayed by the LEDs, either steady or flashing, located on the status indicator display of the Portable Charging Cordset (EVSE).

NOTE:

During normal operation, the charge connector or AC plug may feel warm. If either one feels hot during charging, unplug the Portable Charging Cordset (EVSE) and have a qualified electrician inspect the wall outlet before you continue charging.

WARNING!

Do not use the Portable Charging Cordset (EVSE) with an outlet that is worn or

(Continued)

WARNING!

damaged. Failure to follow this warning can result in electrical shock, fire, property damage, and death or serious injury.

AC LEVEL 2 CHARGING (240 VOLT)

AC Level 2 (240 V) charging requires a 240 V, Level 2 Electric Vehicle Supply Equipment (EVSE) charging station. We recommend using a Level 2 EVSE charger with up to 48 amps for home installation.

When using public charging stations, ensure the charging station is ready to provide charge and the vehicle is in PARK before the Level 2 EVSE is plugged into the vehicle's charge inlet. You will hear a "click" when the charge connector is inserted correctly and is coupled with the vehicle's charge inlet.

NOTE:

The vehicle should start charging automatically. If not, please check the following:

- Charging Station — Check the indications and instructions at the charging station.
- Charging Schedule — Check whether the charging schedule is enabled and if so, whether the vehicle is currently within the scheduled charge time/day (weekday/weekend).

To stop the charging process:

- Press the Unlock button on the Key Fob to unlock the Charging Port.
- Press the Smart Charge button to the right of the Charge port.
- Press the button located on the Level 2 EVSE vehicle connector. There may be a slight delay before you can remove the cable.
- Gently remove the connector from the vehicle charge inlet.
- Plug the charge handle into the Level 2 EVSE station and coil the charging cord onto its holder. Do not leave the charging cord lying on the ground.

DC CHARGING

DC Charging is a significantly faster method of charging your vehicle either on the go or overnight.

When using public charging stations, ensure the charging station is ready to provide charge and the vehicle is in PARK before the charging cable is plugged into the vehicle's charge inlet. You will hear a "click" when the charge connector is inserted correctly and is coupled with the vehicle's charge inlet.


NOTE:

The vehicle should start charging automatically. If not, please check the following:

- Charging Station — Check the indications and instructions at the charging station.
- Charging Schedule — Check whether the charging schedule is enabled and if so, whether the vehicle is currently within the scheduled charge time/day (weekday/weekend).

EMERGENCY RELEASE CABLE - IF EQUIPPED

In the event of an emergency, the charging cordset can be unlocked manually from the charging port. The emergency release cable is located in the rear hatch of the vehicle, behind a quarter panel and next to the 12V battery.

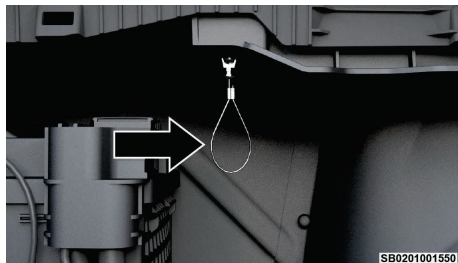

Emergency Release Cable


1. Remove the quarter panel on the left side of the hatch by gently pulling it out.
2. Locate the yellow emergency release cable and pull the cable.

NOTE:

Pulling the emergency release cable may not provide feedback when the Charging corset is unlocked from the charging port. After pulling the emergency release cable, test the charging cordset by pressing the button on the cordset head and removing it from the charging port. If the cordset is still locked, pull the emergency release cable again.

VEHICLE CHARGE INDICATORS

There is a battery display indicator located on the instrument cluster. The battery display will indicate the current State Of Charge (SOC) for the high voltage battery; with the percentage value located to the right of the symbol. When plugged in, the battery symbol also indicates the battery level along with messages about the charge or whether the system is waiting to charge due to the charge schedule. These will appear unless there is a charging fault. A green plug telltale will be shown in the cluster, as well as applicable messaging when charging.

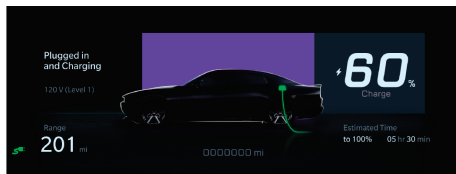

High Voltage Battery Display



Charge Port SOC Indicator

The SOC indicator provides a visual indication of the high voltage battery's charge status during charging. It is also used to indicate a charging problem as well as waiting for a scheduled charge to begin.

ELECTRIC VEHICLE APP

Within the Uconnect system is the Electric Vehicle App that allows you to see the vehicle's power flow, understand your driving history, and set a charging schedule for the vehicle's high voltage battery. To access this App, press the Apps or Vehicle button on the main menu bar of the radio's touchscreen, and locate the Electric Vehicle App.

Driving Pages

The Creep feature allows the vehicle to slow to a rolling speed. The vehicle will come to a complete stop if Creep is deactivated.



When Creep is turned off, the white telltale will appear in the instrument cluster. The Drive pages screen gives you the ability to turn Creep on or off.

Power Flow

The Power Flow screen shows the current power readings for all of the following:

- **Generator** - Shows the amount of power (in kW) the high voltage battery is currently providing/absorbing.
- **Battery** - Shows the amount of power (in kW) the battery of the vehicle has remaining.
- **Climate** - Shows the amount of power (in kW) the Climate Control system is using to maintain the current interior temperature.

Power Flow paths are indicated by the direction of the arrows on the touchscreen.

Range Impact Screen

The Range Impact screen will display the systems currently in use by the vehicle's user and how those systems are draining the total energy of the vehicle.

The systems are displayed in graphs and show the current range reduction while the system is operating. The numbers used on the graph represent the average gained mileage if that specific system is turned off.

- **Current Range:** Current Range displays the remaining mileage the vehicle can drive before the battery is exhausted.
- **Potential Increase:** Potential Increase displays the possible, total gained mileage when all or some of the systems that a user can control are turned off.

When a system is turned off, the Potential Increase will decrease, and Current Range will increase. When systems that drain the energy of the vehicle are turned on, the Current Range will decrease, and the Potential Increase will increase.

NOTE:

All values provided are an approximation and may not reflect the true current range or the true potential increase.

Driving History

The Driving History screen shows the miles (km) driven in kWh (battery powered) at the current time compared to a weekly, two week, or three week average.

Charging Schedule

To set a charging schedule, select the Electric Vehicle App in the touchscreen and follow these steps:

1. Select "Schedules".
2. Select "Charge Schedule".
3. Select the schedule to be set (1 or 2) by pressing the appropriate arrow on the right side of the screen.
4. Select what time Scheduled Charging should start and stop charging or select "Charge Until Full". If "Charge Until Full" is selected a stop charging time cannot be selected.
5. Set the Charge Start Time: Hours, Minutes, and AM/PM.

NOTE:


- This is to occur every week (as long as the vehicle is connected to an EVSE).
6. When done, press the X in the upper right hand corner, then select "yes" to save the charge schedule. The active schedule will be indicated by the check mark to the right of the schedule event line. The event action and time will be displayed.
 7. To add another Scheduled Charging event, repeat these steps.

NOTE:

A maximum of two independent Scheduled Charging events can be scheduled at a given time.

AC Charge Setting

The fourth screen within the Electric Pages App is the AC Charge Settings screen. From this screen, you can select the rate at which your vehicle charges. Rate selections 1 (low rate of charge) through 5 (high rate of charge) are available. The lower the selected rate, the longer it will take for your vehicle to reach a full charge.

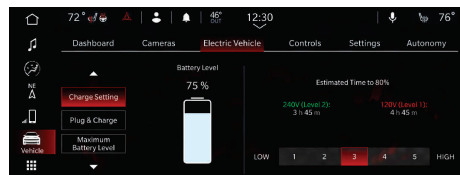


AC Charge Level Screen

The AC Charge Level can be adjusted by selecting one of the levels 1 through 5, with 1 being the slowest rate of charge and 5 being the fastest. The display also shows information related to:

- Battery Level — Indicates, in percentage, the high-voltage battery SOC.
- Estimate time to 100% — Corresponds to the time required to obtain full recharging of the high-voltage battery.

Maximum Battery Level

The Maximum Battery Level screen will allow you to adjust to total battery charge when charging the vehicle. The available options are 80% Daily Range and 100% Full Range.

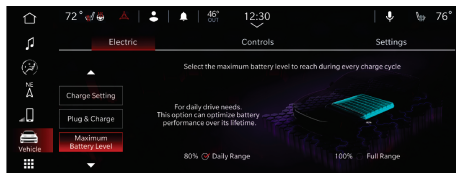

Maximum Battery Level Screen

ASSIST AND SOS – IF EQUIPPED

If equipped, the overhead console contains an ASSIST and an SOS button.



ASSIST And SOS Buttons

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect and Dodge Connect™ features and applications in this vehicle. Only use Uconnect features and Dodge Connect™ services when it is safe to do so. Failure to do

(Continued)

WARNING!

so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber ➞ page 7.
- The ASSIST and SOS buttons will only function if you are connected to an operable LTE (voice/data) or 4G (data) network. Other Uconnect services will only be operable if your Dodge Connect™ service is active and you are connected to an operable LTE (voice/data) or 4G (data) network.

ASSIST Call

The ASSIST button is used to automatically connect you to any one of the following support centers:

- Roadside Assistance – If you get a flat tire or need a tow, just push the ASSIST button to connect to a representative for assistance. Roadside Assistance will know your vehicle and its location. Additional fees may apply for Roadside Assistance.
- Dodge Connect™ Customer Care – In-vehicle support for Dodge Connect™.
- Vehicle Customer Care – Total support for all other vehicle issues.

- Uconnect Customer Care – Total support for radio, phone and NAV issues.

SOS Call

1. Push the SOS Call button.

NOTE:

In case the SOS Call button is pushed in error, there will be a 10 second delay before the SOS Call system initiates a call to an SOS operator. To cancel the SOS Call connection, push the SOS Call button or press the cancellation button on the Device Screen. Termination of the SOS Call will turn off the green LED light on the button.

2. The LED light located on the SOS button will turn green once a connection to an SOS operator has been made.
3. Once a connection between the vehicle and an SOS operator is made, the SOS Call system may transmit the following important vehicle information to an SOS operator:
 - Indication that the occupant placed an SOS Call.
 - The vehicle brand.
 - The last known GPS coordinates of the vehicle.
4. You should be able to speak with the SOS operator through the vehicle audio system to determine if additional help is needed.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect and Dodge Connect™ features and applications in this vehicle. Only use Uconnect features and Dodge Connect™ services when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- Once a connection is made between the vehicle's SOS Call system and the SOS operator, the SOS operator may be able to open a voice connection with the vehicle to determine if additional help is needed. Once the SOS operator opens a voice connection with the vehicle's SOS Call system, the operator should be able to speak with you or other vehicle occupants and hear sounds occurring in the vehicle. The vehicle's SOS Call system will attempt to remain connected with the SOS operator until the SOS operator terminates the connection.

5. The SOS operator may attempt to contact appropriate emergency responders and provide them with important vehicle information and GPS coordinates.

WARNING!

- If anyone in the vehicle could be in danger (e.g., fire or smoke is visible, dangerous road conditions or location), do not wait for voice contact from an Emergency Services Agent. All occupants should exit the vehicle immediately and move to a safe location.
- Never place anything on or near the vehicle's operable network and GPS antennas. You could prevent operable network and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable network and GPS signal reception is required for the SOS Call system to function properly.
- The SOS Call system is embedded into the vehicle's electrical system. Do not add aftermarket electrical equipment to the vehicle's electrical system. This may prevent your vehicle from sending a signal to initiate an emergency call. To avoid interference that can cause the SOS Call system to fail, never add aftermarket equipment (e.g., two-way mobile radio, CB radio, data

(Continued)

WARNING!

recorder, etc.) to your vehicle's electrical system or modify the antennas on your vehicle. IF YOUR VEHICLE LOSES BATTERY POWER FOR ANY REASON (INCLUDING DURING OR AFTER AN ACCIDENT), THE UCONNECT FEATURES, APPS AND SERVICES, AMONG OTHERS, WILL NOT OPERATE.

- Modifications to any part of the SOS Call system could cause the air bag system to fail when you need it. You could be injured if the air bag system is not there to help protect you.

SOS Call System Limitations

Vehicles sold in Mexico **DO NOT** have SOS Call system capabilities.

SOS or other emergency line operators in Mexico may not answer or respond to SOS system calls.

If the SOS Call system detects a malfunction, any of the following may occur at the time the malfunction is detected, and at the beginning of each power cycle:

- The LED light located on the ASSIST and SOS buttons will continuously illuminate red.
- The device screen will display, and an in-vehicle audio message will state, the following

message: "Vehicle Device Requires Service. Please Contact An Authorized Dealer".

WARNING!

- Ignoring the Rearview Mirror light could mean you will not have SOS Call services. If the Rearview Mirror light is illuminated, have an authorized dealer service the SOS Call system immediately.
- The Occupant Restraint Control module turns on the air bag Warning Light on the instrument panel if a malfunction in any part of the system is detected. If the Air Bag Warning Light is illuminated, have an authorized dealer service the Occupant Restraint Control system immediately.

Even if the SOS Call system is fully functional, factors beyond FCA US LLC's control may prevent or stop the SOS Call system operation. These include, but are not limited to, the following factors:

- The power button is in the OFF position.
- The vehicle's electrical systems are not intact.
- The SOS Call system software and/or hardware are damaged during a crash.
- The vehicle battery loses power or becomes disconnected during a vehicle crash.

- LTE (voice/data) or 4G (data) network and/or Global Positioning Satellite signals are unavailable or obstructed.
- Equipment malfunction at the SOS operator facility.
- Operator error by the SOS operator.
- LTE (voice/data) or 4G (data) network congestion.
- Weather.
- Buildings, structures, geographic terrain, or tunnels.

WARNING!

ALWAYS obey traffic laws and pay attention to the road. ALWAYS drive safely with your hands on the steering wheel. You have full responsibility and assume all risks related to the use of the Uconnect and Dodge Connect™ features and applications in this vehicle. Only use Uconnect features and Dodge Connect™ services when it is safe to do so. Failure to do so may result in an accident involving serious injury or death.

NOTE:

- Your vehicle may be transmitting data as authorized by the subscriber.
- Never place anything on or near the vehicle's LTE (voice/data) or 4G (data) and GPS

antennas. You could prevent LTE (voice/data) or 4G (data) and GPS signal reception, which can prevent your vehicle from placing an emergency call. An operable LTE (voice/data) or 4G (data) network connection and a GPS signal is required for the SOS Call system to function properly.

NOTE:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Automatic SOS — If Equipped


Automatic SOS is a hands-free safety service that can immediately connect you with help in the event that your vehicle's airbags deploy. Please refer to your provided radio supplement for complete information.

TIRE SERVICE KIT — IF EQUIPPED

Scan this QR code to learn more about the Tire Service Kit.




The Tire Service Kit is located in the hatch.

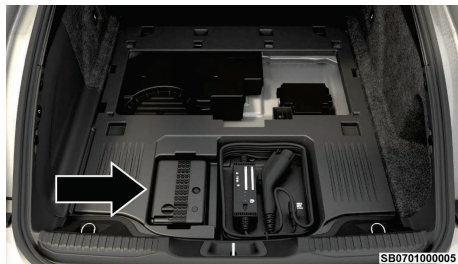

Tire Service Kit

Tire Service Kit Components

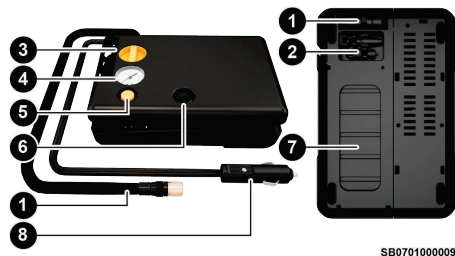

Tire Service Kit Components

- 1 — Sealant/Air Hose
- 2 — Hose Accessories
- 3 — Mode Select Knob
- 4 — Pressure Gauge
- 5 — Deflation Button
- 6 — Power Switch
- 7 — Sealant Bottle
- 8 — Power Plug

JUMP STARTING

If your vehicle has a discharged battery it can be jump started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack. Jump starting can be dangerous if done improperly so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack follow the manufacturer's operating instructions and precautions.

The vehicle requires its 12 Volt battery power to turn-on the vehicle's high voltage battery. The high voltage battery is used to charge the 12 Volt battery and provide electric vehicle operation.. If the 12 Volt battery has been discharged, the vehicle can be jump started using a set of jumper cables and a battery in another vehicle or by using a portable battery booster pack.

If the vehicle's high voltage battery has also been discharged, it will need to be recharged

to a minimum operating State Of Charge (SOC) before the vehicle can be started:

- If the vehicle can be connected to a Level 1 or Level 2 charger where it is currently parked, the vehicle will still require a jump start to allow the vehicle to begin the battery charging process. Once the vehicle charging has begun (indicated by the charge status indicator on top of the vehicle's instrument panel), the jumper cables can be removed from the vehicle jump posts.
- If the vehicle cannot be connected to a Level 1 or Level 2 charger where it is currently parked, the vehicle can be moved by connecting 12 Volt power to the vehicle's jump posts and then shifting the vehicle from PARK (P) into NEUTRAL (N). Power provided by the jumper cables will also allow the Electric Park Brake to be released. Carefully move the vehicle to a Level 1 or Level 2 charge location. While the vehicle is being moved, the external 12 Volt power must remain connected to the vehicle jump posts.

NOTE:

Be careful when moving the vehicle - ensure that control of the vehicle is maintained. Also, ensure that vehicle is secured to prevent unintentional movement during and after moving the vehicle. If the external 12 Volt power becomes disconnected from the vehicle jump posts or there is an interruption of the 12 Volt

power while moving the vehicle, the vehicle may shift to PARK. Do not allow the jumper cables to come in contact with each other or to the vehicle, this will result in a short.

When the vehicle is at the charging location, shift the vehicle back to PARK, apply the Electric Park Brake, and start the high voltage battery charging. Once the vehicle has been secured against unintentional movement and high voltage battery charging has been initiated, the jumper cables can be removed from the vehicle jump posts.

Jump starting can be dangerous if done improperly so please follow the procedures in this section carefully.

NOTE:

When using a portable battery booster pack, follow the manufacturer's operating instructions and precautions.

WARNING!


Do not attempt jump starting if the battery is frozen. It could rupture or explode and cause personal injury.

CAUTION!

Do not use a portable battery booster pack or any other booster source with a system voltage greater than 12 Volts or damage to the battery, starter motor, alternator or electrical system may occur.

PREPARATIONS FOR JUMP START

The battery is stored under an access cover in the hatch. Remote battery posts are located under the hood on the right side for jump starting.

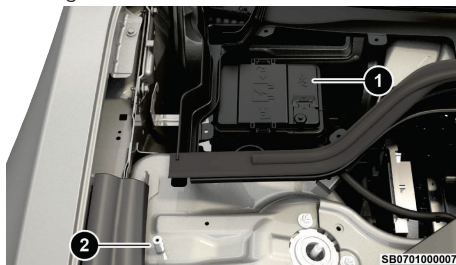

Jump Starting Locations

- 1 — Remote Positive (+) Post
2 — Remote Negative (-) Post

NOTE:

The remote battery posts are viewed by standing on the right side of the vehicle looking over the fender. The positive battery post may be covered with a protective cap. Lift up on the cap to gain access to the positive battery post. Do not jump off fuses. Only jump directly off the remote positive post which has a positive (+) symbol on or around the post.

See the following steps to prepare for jump starting:

1. Apply the parking brake, shift the vehicle into PARK and place the vehicle to the OFF position.
2. Turn off the heater, radio, and all electrical accessories.
3. If using another vehicle to jump start the battery, park the vehicle within the reach of the jumper cables, apply the parking brake, and make sure the vehicle is OFF.

WARNING!

- Take care to avoid the radiator cooling fan whenever the hood is raised. It can start anytime the power button is ON. You can be injured by moving fan blades.
- Remove any metal jewelry such as rings, watch bands and bracelets that could make

(Continued)

WARNING!

an inadvertent electrical contact. You could be seriously injured.

- Batteries contain sulfuric acid that can burn your skin or eyes and generate hydrogen gas which is flammable and explosive. Keep open flames or sparks away from the battery.
- Do not allow vehicles to touch each other as this could establish a ground connection and personal injury could result.

JUMP STARTING PROCEDURE

WARNING!

Failure to follow this jump starting procedure could result in personal injury or property damage due to battery explosion.

CAUTION!

Failure to follow these procedures could result in damage to the charging system of the booster vehicle or the discharged vehicle.

Connecting The Jumper Cables

1. Connect the positive (+) end of the jumper cable to the remote positive (+) post of the vehicle with the discharged battery.

2. Connect the opposite end of the positive (+) jumper cable to the positive (+) post of the booster battery.
3. Connect the negative (-) end of the jumper cable to the negative (-) post of the booster battery.
4. Connect the opposite end of the negative (-) jumper cable to the remote negative (-) post (exposed metallic/unpainted post of the discharge vehicle) located directly behind the underhood fuse box.

WARNING!

Do not connect the jumper cable to the negative (-) post of the discharged battery. The resulting electrical spark could cause the battery to explode and could result in personal injury.

5. Start the engine in the vehicle that has the booster battery, let the engine idle a few minutes, and then power on the vehicle with the discharged battery.

CAUTION!

Do not run the booster vehicle engine above 2,000 RPM since it provides no charging benefit, wastes fuel, and can damage booster vehicle engine.

6. Once the vehicle is started, follow the disconnection procedure.

Disconnecting The Jumper Cables

1. Disconnect the negative (-) end of the jumper cable from the remote negative (-) post of the vehicle with the discharged battery.
2. Disconnect the opposite end of the negative (-) jumper cable from the negative (-) post of the booster battery.
3. Disconnect the positive (+) end of the jumper cable from the positive (+) post of the booster battery.
4. Disconnect the opposite end of the positive (+) jumper cable from the remote positive (+) post of the vehicle with the discharged battery, and reinstall the protective cap.

If frequent jump starting is required to start your vehicle you should have the battery and charging system inspected at an authorized dealer.

CAUTION!

Accessories plugged into the vehicle power outlets draw power from the vehicle's battery, even when not in use (i.e., cellular devices, etc.). Eventually, if plugged in long enough

(Continued)

CAUTION!

without vehicle operation, the vehicle's battery will discharge sufficiently to degrade battery life and/or prevent the vehicle from starting.

FREED A STUCK VEHICLE

If your vehicle becomes stuck in mud, sand or snow, it can often be moved using a rocking motion. Turn the steering wheel right and left to clear the area around the front wheels. Push and hold the lock button on the gear selector. Then, shift back and forth between DRIVE (D) and REVERSE (R) while gently pressing the accelerator.

NOTE:

Shifts between DRIVE (D) and REVERSE (R) can only be achieved at wheel speeds of 5 mph (8 km/h) or less. Whenever the vehicle remains in NEUTRAL (N) for more than two seconds, you must press the brake pedal to engage DRIVE (D) or REVERSE (R).

Use the least amount of accelerator pedal pressure that will maintain the rocking motion without spinning the wheels.

NOTE:

Push the ESC OFF button to place the Electronic Stability Control (ESC) system in "Partial OFF"

mode, before rocking the vehicle. Once the vehicle has been freed, push the ESC OFF button again to restore "ESC On" mode.

WARNING!

Fast spinning tires can be dangerous. Forces generated by excessive wheel speeds may cause damage, or even failure, of the axle and tires. A tire could explode and injure someone. Do not spin your vehicle's wheels faster than 30 mph (48 km/h) or for longer than 30 seconds continuously without stopping when you are stuck and do not let anyone near a spinning wheel, no matter what the speed.

CAUTION!

- Spinning the wheels may lead to gear box overheating and failure. Allow the vehicle to rest with the gear box in NEUTRAL for at least one minute after every five rocking-motion cycles. This will minimize overheating and reduce the risk of gear box failure during prolonged efforts to free a stuck vehicle.
- When "rocking" a stuck vehicle by shifting between DRIVE and REVERSE, do not spin the wheels faster than 15 mph (24 km/h), or drivetrain damage may result.

(Continued)

CAUTION!

- Spinning the wheels too fast may lead to gear box overheating and failure. It can also damage the tires. Do not spin the wheels above 30 mph (48 km/h) while in gear (no gear box shifting occurring).

TOWING A DISABLED VEHICLE

NOTE:

The vehicle must be in Neutral (N) with the parking brake released before loading the vehicle onto a flatbed tow truck. To place the vehicle into Neutral (N), the 12 Volt battery must be connected and fully charged. If there is a low voltage issue with the 12 Volt battery, refer to "Jump Starting" and attempt to place the vehicle into Neutral (N). If the Jump Starting procedure does not resolve the situation or the shifter still cannot be placed into Neutral (N), contact a commercial towing service and have the vehicle transported.

This section describes procedures for towing a disabled vehicle using a commercial towing service.

Towing Condition	Wheels OFF The Ground	Single Speed Gear Box
Flat Tow	NONE	NOT ALLOWED
Wheel Lift Or Dolly Tow	Front	NOT ALLOWED
	Rear	NOT ALLOWED
Flatbed	ALL	ONLY METHOD

Proper towing or lifting equipment is required to prevent damage to your vehicle. Use only tow bars and other equipment designed for this purpose, following equipment manufacturer's instructions. Use of safety chains is mandatory. Attach a tow bar or other towing device to main structural members of the vehicle, not to fascia/bumpers or associated brackets. State and local laws regarding vehicles under tow must be observed.

If you must use the accessories (wipers, defrosters, etc.) while being towed, the Start button must be in the ON/RUN mode.


CAUTION!

- Do not use sling type equipment when towing. Vehicle damage may occur.
- When securing the vehicle to a flatbed truck, do not attach to front or rear suspension components. Damage to your vehicle may result from improper towing.
- FCA US LLC does not recommend towing this vehicle using a tow dolly. Vehicle damage may occur.
- If the vehicle being towed requires steering, the vehicle must be in the ACC or ON/RUN mode, not in the LOCK/OFF mode.

WITHOUT THE KEY FOB

Special care must be taken when the vehicle is towed with the Start button in the OFF mode. The only approved method of towing without the key fob is with a flatbed truck. Proper towing equipment is necessary to prevent damage to the vehicle.

UNDERHOOD COMPARTMENT — EV MODELS

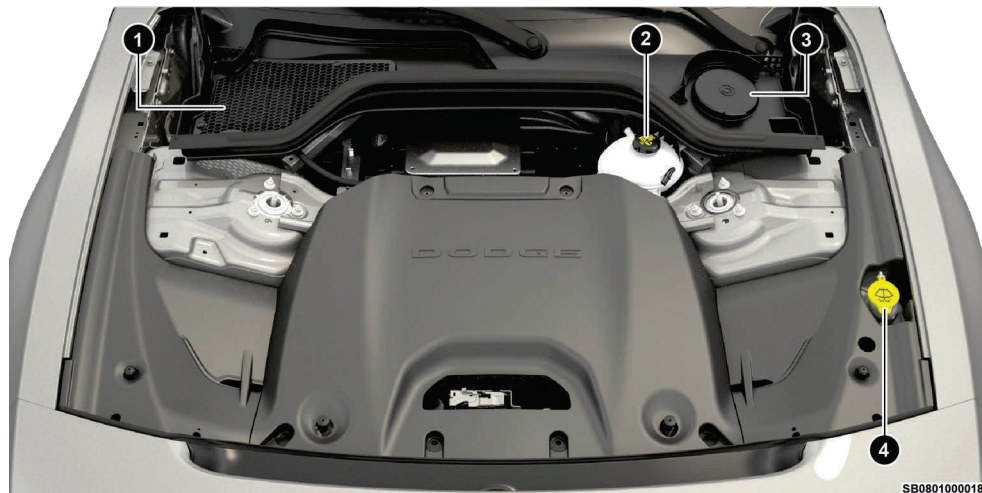

1 — Fuse Block

2 — Coolant Surge Tank and Pressure Cap

3 — Brake Fluid Reservoir

4 — Windshield Washer Bottle

ELECTRIC DRIVE MODULE (EDM) BREAK-IN RECOMMENDATIONS

A long break-in period is not required for the Electric Drive Module (EDM) and drivetrain components in your vehicle.

Vehicles are built with bearings and gears that require a brief period of time to properly break-in to prevent overheating or premature damage.

- Drive moderately during the first 300 miles (500 km). After the initial 60 miles (100 km), speeds up to 50 or 55 mph (80 or 90 km/h) are desirable.
- While cruising, brief full-throttle acceleration within the limits of local traffic laws contributes to a good break-in.
- Towing is not recommended within the first 500 miles (805 km) of operation.
- After 500 miles (805 km), towing in short distances of less than 15 miles (24 km) is recommended and the vehicle should be cooled down before proceeding. This should be repeated during the first 45 to 50 miles (72 to 80 km) of towing.

FLUID CAPACITIES

Component	US	Metric
Cooling System	14.5 qt	13.9 L
Electric Drive Module (EDM)	2.75 qt	2.6 L

FLUIDS AND LUBRICANTS

Component	Fluid, Lubricant, or Genuine Part
Coolant	We recommend using Mopar® Antifreeze/Coolant 10 Year/150,000 Mile (240,000 km) Formula OAT (Organic Additive Technology).
Electric Drive Module (EDM)	Ultra Low Viscosity (ULV) Automatic Transmission Fluid.
Brake Fluid Master Cylinder	We recommend using Mopar® DOT 3, SAE J1703.

CAUTION!

- Mixing of coolant (antifreeze) other than specified Organic Additive Technology (OAT) coolant (antifreeze), may result in vehicle damage and may decrease corrosion protection. Organic Additive Technology (OAT) coolant is different and should not be mixed with Hybrid Organic Additive Technology (HOAT) coolant (antifreeze) or any “globally compatible” coolant (antifreeze). If a non-OAT coolant (antifreeze) is introduced into the cooling system in an emergency, the cooling system will need to be drained, flushed, and refilled with fresh OAT coolant (conforming to MS.90032), by an authorized dealer as soon as possible.
- Do not use water alone or alcohol-based coolant (antifreeze) products. Do not use additional rust inhibitors or antirust products, as they may not be compatible with the radiator coolant and may plug the radiator.
- This vehicle has not been designed for use with propylene glycol-based coolant (antifreeze). Use of propylene glycol-based coolant (antifreeze) is not recommended.

SERVICING AND MAINTENANCE

MAINTENANCE PLAN — EV MODELS

Refer to the maintenance plan for the required maintenance intervals. More frequent maintenance may be needed in severe conditions, such as dusty areas and very short trip driving. In some extreme conditions, additional maintenance not specified in the maintenance schedule may be required.

WARNING!

- You can be badly injured working on or around a motor vehicle. Do only service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.
- Failure to properly inspect and maintain your vehicle could result in a component malfunction and affect vehicle handling and performance. This could cause an accident.

Once a Month or Before A Long Trip

- Check the operation of the interior and exterior lights

- Check the 12V battery terminals, cables and connections
- Check the brake pads, rotors, brake operation and fluid level
- Check the steering, suspension, chassis components and axle boots
- Check the wiper and washer operation, wiper blades and reservoir
- Check the tire pressure
- Check the coolant fluid reservoir/s

Every 10,000 Miles (16,000 Km)

- Rotate the tires every 10,000 or if tread depth difference is 2/32" (1.5 mm) or greater, whichever comes first

- Inspect the CV/Universal joints

Every 12,000 Miles (19,000 Km)

- Replace the cabin air filter

Every 20,000 Miles (32,000 Km)

- Inspect front suspension, tie rod ends, boot seals, and replace if necessary
- Inspect the brake pads, replace as necessary

Every 2 Years

- Replace the brake fluid ¹

Every 10 Years 150,000 Miles (240,000 Km)

- Flush and replace the coolant at 10 years or 150,000 miles (240,000 km) whichever comes first
- Drain and fill the Electric Drive Module (EDM)

TRAILER TOWING

Trailer towing with this vehicle is not recommended.

¹ The brake fluid change interval is time based only, mileage intervals do not apply

A

Adaptive Cruise Control (ACC) (Cruise Control)	28
Air Conditioning	21
Automatic Headlights	27
Automatic High Beams	27
Automatic Temperature Control (ATC)	21, 22
AUX Cord	16
Auxiliary Electrical Outlet (Power Outlet)	15

B

Battery	40
Charging	42
Brake System	
Parking	31

C

Capacities, Fluid	60
Cargo Area Cover	39
Charging	42
Wireless	16
Climate Control	21
Automatic	21
Contract, Service	6

Cooling System

Cooling Capacity	60
Selection Of Coolant (Antifreeze)	60
Cruise Control (Speed Control)	28
Customer Assistance	5
Customer Programmable Features	12

D

Disabled Vehicle Towing	57
Doors	11

E

Emergency, In Case Of

Freeing Vehicle When Stuck	57
Jump Starting	54, 56
Towing	57
Exterior Lighting	26
Exterior Lights	26

F

Fluid Capacities	60
Freeing A Stuck Vehicle	57

G

Garage Door Opener (HomeLink)	30
-------------------------------------	----

H

Hatch Release	38
Head Restraints	25
Head Rests	25
Headlights	
Automatic	27
On With Wipers	27
Switch	26
High Voltage Battery	40
HomeLink (Garage Door Opener)	30
Hood Prop	37
Hood Release	37

I

Information Center, Vehicle	19
Inside Rearview Mirror	51

J

Jump Starting	54, 56
---------------------	--------

K

Keyless Enter 'n Go™	11
Passive Entry	11
Passive Entry Programming	11

L

Latches	
Hood	37
Lights	
Automatic Headlights	27
Exterior	26
Headlight Switch	26
Headlights	26
Headlights On With Wipers	27
Instrument Cluster	26

M

Maintenance Schedule	61
Manual	
Service	6
Media Hub	16
Memory Seat	24
Memory Settings	24
Mirrors	
Rearview	51
MP3 Control	16

N

New Vehicle Break-In Period	60
-----------------------------------	----

O

Operator Manual	
Owner's Manual	6

P

Parking Brake	31
ParkSense	
Front And Rear	31
ParkSense System, Rear	31
Passive Entry	11
Power	
Hatch Release	38
Outlet (Auxiliary Electrical Outlet)	15
Seats	23
Programmable Features	12

R

Rain Sensitive Wiper System	28
Rear ParkSense System	31
Release, Hood	37
Remote Hatch Release	38
Restraints, Head	25

S

Schedule, Maintenance	61
-----------------------------	----

Seats

Head Restraints	25
Height Adjustment	23
Power	23
Tilting	23
Vented	23
Ventilated	23
Selection Of Coolant (Antifreeze)	60
Service Assistance	5
Service Contract	6
Service Manuals	6
Speed Control (Cruise Control)	28
Starting	10
Starting And Operating	10
Starting Procedures	10

T

Temperature Control, Automatic (ATC) ..	22
To Open Hood	37
Towing	62
Disabled Vehicle	57
Trailer Towing	62

U

Uconnect Phone	13
Pair (Link) Uconnect Phone To A Mobile Phone	13


Uconnect Settings	
Customer Programmable Features	11
Passive Entry Programming	11
Underhood Compartment	59
USB	16


V


Voice Command	14
Voice Recognition	14
Voice Recognition System (VR)	14

W

Warning Lights And Messages	21
Windshield Washers	27
Windshield Wipers	27
Wipers, Rain Sensitive	28
Wireless Charging Pad	16








The driver's primary responsibility is the safe operation of the vehicle. Driving while distracted can result in loss of vehicle control, resulting in an accident and personal injury. FCA US LLC strongly recommends that the driver use extreme caution when using any device or feature that may take their attention off the road. Use of any electrical devices, such as cellular telephones, computers, portable radios, vehicle navigation or other devices, by the driver while the vehicle is moving is dangerous and could lead to a serious accident. Texting while driving is also dangerous and should never be done while the vehicle is moving. If you find yourself unable to devote your full attention to vehicle operation, pull off the road to a safe location and stop your vehicle. Some states or provinces prohibit the use of cellular telephones or texting while driving. It is always the driver's responsibility to comply with all local laws.

This Owner Handbook has been prepared to help you get acquainted with your new Dodge brand vehicle and to provide a convenient reference source for common questions.

Not all features shown in this handbook may apply to your vehicle. For additional information, visit mopar.com/om (USA), owners.mopar.ca (Canada) or your local Dodge brand dealer.

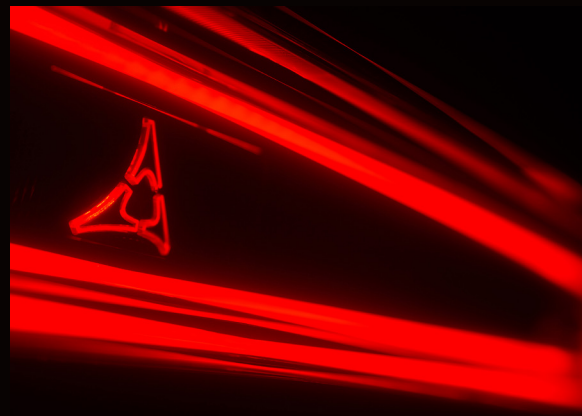

DRIVING AND ALCOHOL

Drunk driving is one of the most frequent causes of accidents. Your driving ability can be seriously impaired with blood alcohol levels far below the legal minimum. If you are drinking, don't drive. Ride with a designated non-drinking driver, call a cab, a rideshare, a friend, or use public transportation.

WARNING

Driving after drinking can lead to an accident. Your perceptions are less sharp, your reflexes are slower and your judgment is impaired when you have been drinking. Never drink and then drive.



DODGE



**DOWNLOAD THE MOST UP-TO-
DATE OWNER HANDBOOK, RADIO
AND WARRANTY BOOKS**

USA



mopar.com/om

CANADA



owners.mopar.ca

©2025 FCA US LLC. ALL RIGHTS RESERVED. TOUS DROITS RÉSERVÉS. DODGE IS A REGISTERED TRADEMARK OF FCA US LLC OR FCA CANADA INC., USED UNDER LICENSE. DODGE EST UNE MARQUE DÉPOSÉE DE FCA US LLC OU FCA CANADA INC., UTILISÉE SOUS LE PERMIS. APP STORE IS A REGISTERED TRADEMARK OF APPLE INC. GOOGLE PLAY STORE IS A REGISTERED TRADEMARK OF GOOGLE.

Third Edition V2
45_LB_OH_EN_USC